



# C3X Lumis HOST

manuale d'uso ed installazione  
user and installation manual  
bedienungs und wartungsanleit  
manuel d'utilisation et d'installation  
manual de uso e instalación  
manual de utilização  
使用及安装手册  
ВИДЕОПРОЕКТОР



1 INTRODUCTION

The **C3X Lumis HOST** system combines the video signal processing capacity of the **HOST** system with the reproductive fidelity of the projector employing DLP™ technology, connecting the two units via optical fibre.

The **HOST** system, ideally placed next to the sources, is able to acquire and process a very wide range of video signals, and to send them, via an optical fiber connection, to the projector.

Its range of inputs (2 Composite Video inputs, 2 S-Video inputs, 4 Component or RGB inputs (3 via Phono/RCA connection & 1 Via BNC connection), 2 graphic RGB inputs, 6 HDMI™ inputs, 1 SDI input, 1 DVI-D input) allow it to be connected to a wide range of analogue and digital sources: DVD players, video recorders, satellite and terrestrial receivers, computers, video game consoles, camcorders, etc. Its image processing system permits optimum reproduction of a wide range of input signals, from interlaced video to high definition and digital graphics. Faithful reproduction of signals at higher resolutions (such as high definition video and graphics) occurs without loss of information or reduction of image sharpness thanks to the processor's high pixel rate signal acquisition capabilities. Different input signal resolutions can be adapted to match the specified screen resolution without loss of image quality, thanks to a generous selection of default aspect ratios, some of which are user definable. All picture adjustments can be made with the remote control interacting with a simple menu-activated On Screen Display; alternatively, the projector can be controlled by a domestic automation system through its serial port, the 1.1 USB port, an RS232 serial port or the RJ45 Ethernet port.

**The appliance has been subjected to exhaustive operating tests by SIM2 to guarantee the highest quality. The projector bulb life should thus initially be around 30-60 hours. In addition to the customary checks, the Quality Control department also runs additional statistical tests before shipment. In such cases, the packaging may show signs of having been opened, and the hours of lamp operation may prove to be higher than those normally shown when only standard tests are performed.**


CONTENTS

1	INTRODUCTION	1
2	SAFETY WARNINGS	2
3	CONTENTS OF THE PACKAGING	4
4.1	CONTROL (REMOTE CONTROL)	4
4.2	CONTROL (Projector keypad)	5
4.3	CONTROL (Host keypad)	5
5	CONNECTION PANEL	6
6	INSTALLATION	7
7	SWITCHING ON AND OFF	9
8	NETWORK FUNCTIONS	11
9	VIDEO CONNECTIONS	11
10	ON-SCREEN MENU	12
11	CLEANING AND MAINTENANCE	20
12	TROUBLESHOOTING GUIDE	20
13	OPTIONAL ACCESSORIES	21
14	TECHNICAL SPECIFICATIONS	22


APPENDIX

APP.1	PROJECTION DISTANCES
APP.2	INSTALLATION INSTRUCTIONS (Vertical Shift)
APP.3	DIMENSIONS HOST - C3X LUMIS HOST


PROJECTOR

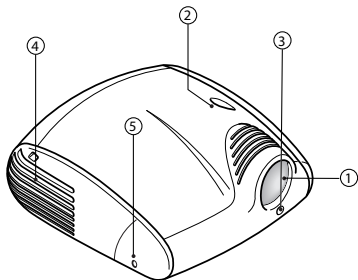

- 1 Projection lens
- 2 Lens shift knob
- 3 Remote control IR sensor
- 4 Cooling air vents

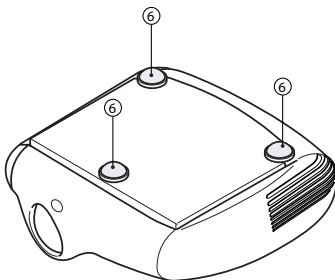

- 5 Bulb compartment
- 6 Adjustable feet
- 7 Fused power socket
- 8 Main power switch

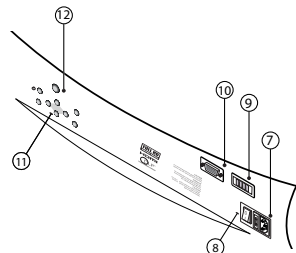

- 9 Fiber link connections
- 10 RS232 Service Connector
- 11 Control keypad
- 12 Anamorphic lens connection

DLP and DMD are registered Texas Instruments trademarks. HDMI, the HDMI logo and the expression High-Definition Multimedia Interface are trade marks or registered marks of HDMI licensing LLC

## 2 SAFETY WARNINGS



### CAUTION

To reduce the risk of electrocution, disconnect the power supply cable on the rear panel before removing the top cover of the projector. For technical service refer to trained personnel authorised by the manufacturer.

### LAMP WARNING

If the lamp suddenly 'fails' with a loud 'pop' Switch off the Projector & HOST and air the room thoroughly. Do not attempt to replace the lamp yourself until the unit is inspected by an authorised SIM2 service agent.

### ENVIRONMENTAL INFORMATION

This product contains materials derived from natural resources during its manufacture. It may contain materials which constitute a health and environmental hazard. To prevent harmful materials from being released into the environment and to promote the use of natural materials, SIM2 Multimedia provides the following information regarding the disposal and recycling of the product. Waste electrical and electronic materials (WEE) should never be disposed of in normal urban waste disposal facilities. The label on the product, shown here, indicating a cancelled garbage can, is intended to remind you that the product requires special handling at the end of its service life. Materials such as glass, plastic and some chemical compounds are recoverable and can be recycled for reuse. Please observe the following instructions:

- 1. When you no longer wish to use your electrical and electronic equipment, take it to your local waste disposal facility for recycling.**
- 2. You may return your old equipment to your dealer free of charge when you buy a new product which is equivalent or has the same functions as the old one. Call SIM2 Multimedia to find your local dealer.**
- 3. If you need more information regarding recycling, reuse and product exchanges, please contact customer service at the number given in the manual.**

Lastly we suggest further measures to safeguard the environment, such as recycling of internal and external packaging (including that used for shipping) in which the product was delivered. With your help, we can reduce the amount of environmental resources required to make electric and electronic equipment, reduce the use of waste tips for used equipment and, in general, improve our quality of life by making sure that hazardous materials are correctly scrapped.

Incorrect treatment of the product at the end of its service life and failure to follow the above disposal instructions are punishable under local legislation.

### ATTENTION

Due to the compact nature, high brightness and contrast of the optical system within the C3X Lumis HOST, a small amount of light scatter may be seen outside the edges of the screen area and this effect will vary depending on the type of lens used and the zoom and shift setting. This is a normal characteristic of the optical system. To reduce this effect SIM2 recommends that the area surrounding the screen should be as dark as possible.

The C3X Lumis HOST is a three chip DLP™ design using three high resolution DMD's™ (Red, Green, Blue). These three DMD's are carefully aligned into position by a high precision process at the factory which reduces alignment errors to within the stated tolerances.

Maximum permissible limits for the misalignment are: Screen Centre - Up to 0.7 pixel between each color. Screen Corners Up to 2 Pixel between each color. Please Note: 1 pixel is equivalent to 10 thousandths of a millimetre on the DMD™.

**Read all chapters of this manual carefully before switching on the projector. This manual provides basic instructions for using the C3X Lumis HOST system. Installation, preliminary adjustments and procedures that necessitate the removal of the top cover and contact with electrical components must be performed by authorised, trained technicians. To ensure safe operation and long term reliability use only the power cables supplied by the manufacturer. Observe all warnings and precautions.**



### Read this manual carefully.

This manual contains important information on how to install and use this equipment correctly. Before using the equipment, read the safety prescriptions and instructions carefully. Keep the manual for future consultation.

### Do not touch internal parts of the units.

Inside the housing there are electrical parts carrying dangerously high voltages and parts operating at high temperature. Never open the housing. Entrust all servicing and repair work to an authorised Service Centre. Opening the housing voids the warranty.

### Disconnecting the appliance from the power supply.


The device which disconnects the unit from the mains is the power plug. Ensure that the power cable plugs and the electrical mains socket outlets are easily accessible during installation operations. Pull the plug, not the cable, to disconnect the unit from the mains. Use only the specified power supply. Connect the units to a mains electrical supply with rated voltage of between 100-240 VAC, 50/60 Hz and equipped with a protective earth connection. If you are not sure of your domestic mains rating, contact an electrician. Take care to avoid overloading the power socket and any extension leads.

### C3X Lumis Host RS232 Port Connector

The RS232 Port placed on the projector back panel is only for service operations. Do not use this port. For all remote applications use RS232 Port placed on HOST Connections panel.

### Changing the fuses (HOST System and Projector)

Before changing the fuse, disconnect the unit from the mains power supply. The fuse compartment is next to the power supply connector. Remove the fuse holder with a flat head screwdriver and replace the fuse. Fit the replacement fuse. Use only T 10A L H fuses for the projector and FUSE T 3,15 A H, 250V~ fuses for the HOST system.

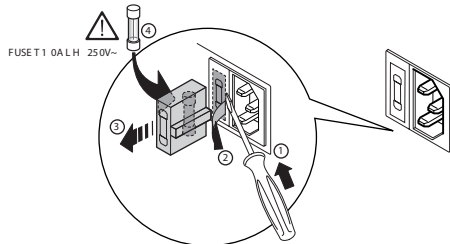


### Be careful with cables.

Make certain cables are routed so that people will not be impeded or tripped up. Keep all cables away from children. Install the unit as close to the wall socket as possible. Avoid stepping on power cables, make certain they do not become tangled, and never jerk or tug them; do not expose them to sources of heat, and make sure they do not become knotted or crimped. If the power cables become damaged, stop using the system and request the assistance of an authorised technician.

### Connection of the units to the mains power supply. (HOST System and Projector)

Connect the unit as shown in Figure.

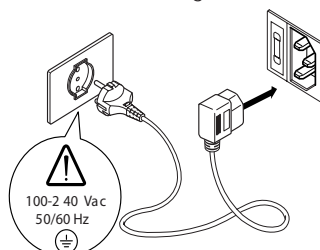

### Disconnect the unit from the mains power during electrical storms and when not in use.

To prevent damage from lightning strikes in the vicinity, disconnect the unit during storms or when the system is going to be left unused for a long time.

### Avoid contact with liquids and exposure to damp.

Do not use the unit near water (sinks, tubs, etc.); do not place objects containing liquids on or near the units and do not expose them to rain, humidity, drops of water or sprays; do not use water or liquid detergent to clean them.

### Do not allow the units to overheat.

To prevent overheating, allow a free space of at least 20 cm at the back of the projector. Do not obstruct the ventilation slots. Do not place the unit near heat sources such as heaters, radiators or other devices (including amplifiers) that generate heat. Do not place the unit in an area where there is insufficient space (shelving units, bookshelves, etc.) and in general avoid placing it in poorly ventilated areas as this may prevent sufficient cooling.

### Never look directly at the projection lamp.

Never look directly at the lamp when it is on as the intense light may damage your eyes. Take particular care that children cannot do so.

### Take special care regarding movement of the lens.

Do not place objects in the slots on the side of the lens, and also ensure that vertical lens movements are not impeded by external objects.

### Place the unit on a stable surface.

Place the projector on a stable surface or use the ceiling mounting bracket provided. Never place the projector on its side or rear, on the lens or top panel.

### Do not insert objects through the openings in the unit.

Make sure that no objects are inserted inside the units. If this should occur, disconnect the unit from the power supply immediately and call an authorised technician.

### Power saving.

We advise disconnecting the unit from the power supply when not in use. In this way you will achieve considerable power savings while at the same time protecting internal electrical parts from wear.

### ! ATTENTION:

**Do not switch off the HOST system via the front panel or remove the power without first setting the system into standby and allowing the unit to complete the cool down sequence. The HOST and projector are in constant communication with each other, therefore when switching off the system, both units must be switched off together and vice versa when powering on the system. In the event of a power outage it is recommended to completely reset the HOST and projector.**

### PRODUCT DISPOSAL


This projector is fitted with a pressurised lamp containing a small amount of mercury. These lamps may be subject to special disposal regulations due to environmental considerations. For disposal or recycling information, please contact your local authorities or, if you are located in the USA, the Electronic Industries Alliance.

[www.eiae.org](http://www.eiae.org)  
[www.lamprecycle.org](http://www.lamprecycle.org)

## 3 CONTENTS OF THE PACKAGING

### Inside the packaging you will find:


- Projector
- HOST System
- Remote control
- Four 1.5V AAA type batteries for the remote control
- 3 mains cables for the projector (EU, UK, USA)
- 3 mains cables for the Host system (EU, UK, USA)
- 1 cable with 3 optical fibres
- LiveColors Calibrations CD
- 2 brackets to attach the Host system to the rack
- Instruction booklet.
- two 12volt jack plugs

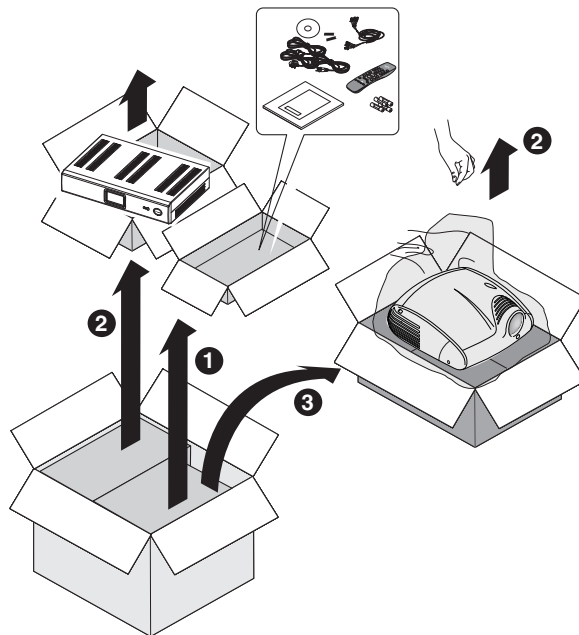


### ATTENTION:

(If any of the accessories are missing, please contact your dealer as soon as possible.


## 4.1 CONTROL (REMOTE CONTROL)

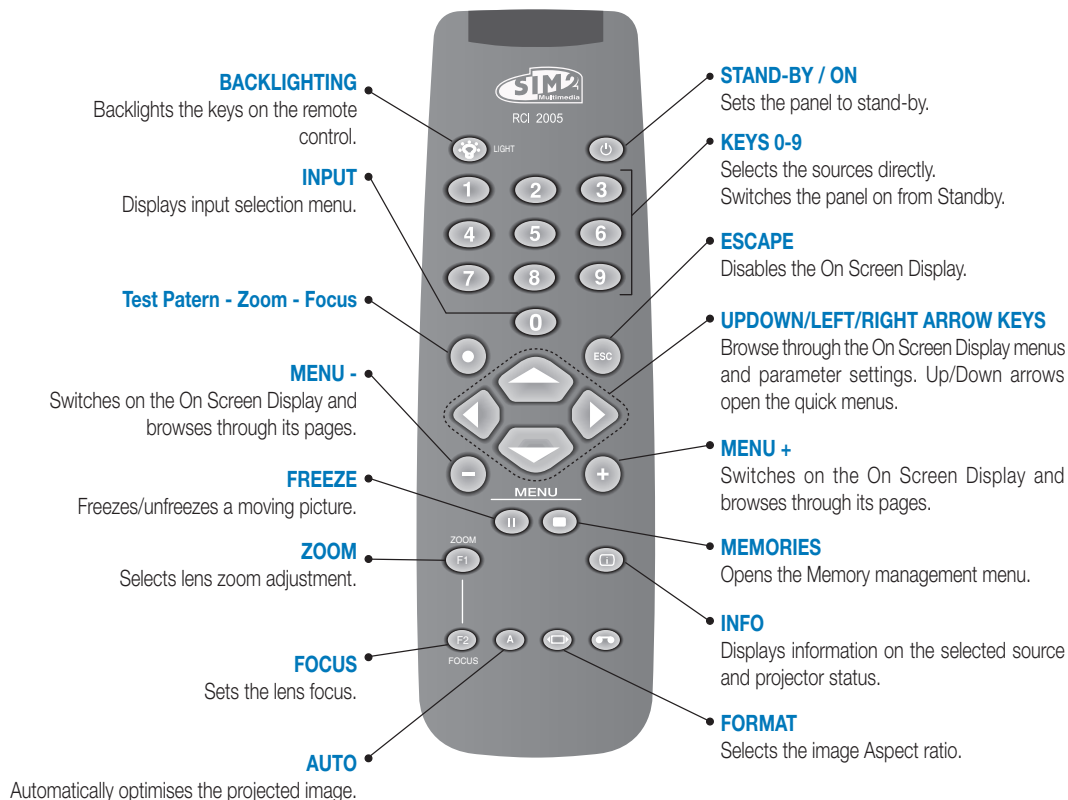

## 4.2 CONTROL (PROJECTOR KEYPAD)

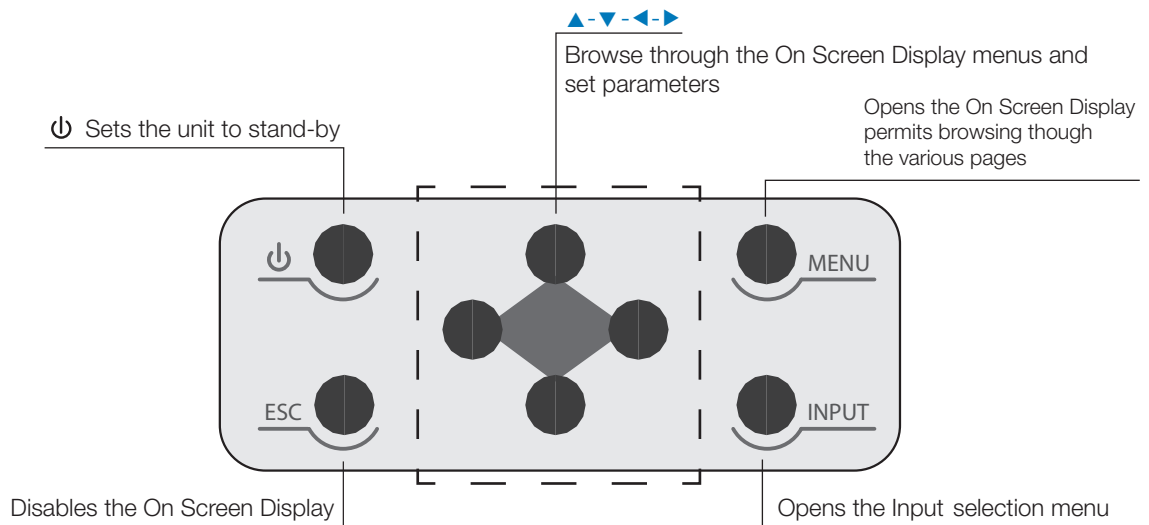


## 4.3 CONTROL (HOST KEYPAD)

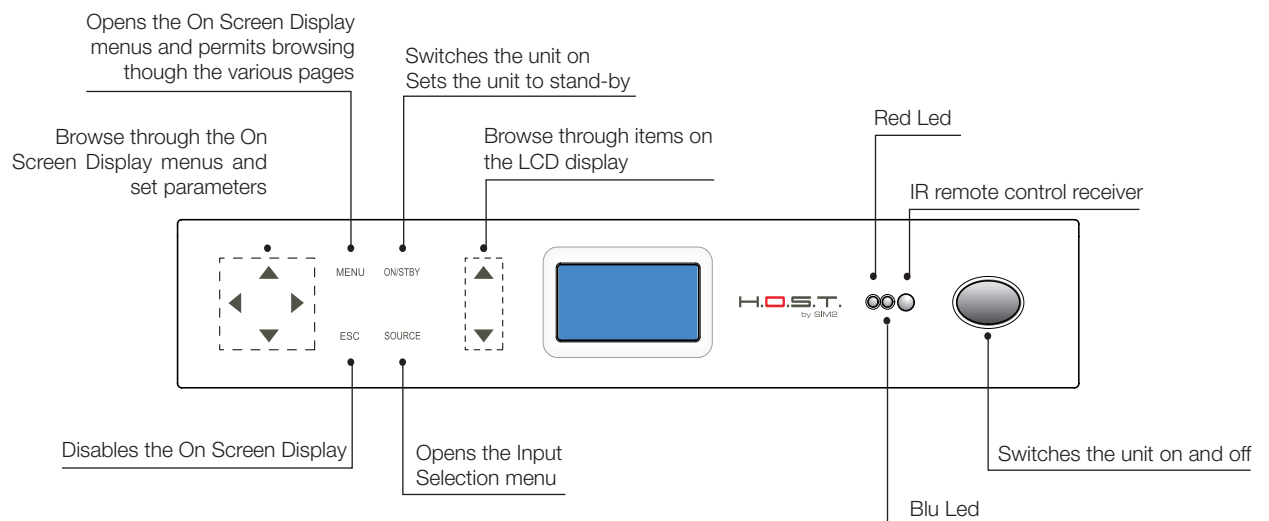

**! Please Note:** The keys on the front panel of the HOST are “Touch Sensitive”. This means you do not need to press the keys but simply apply a light touch.

## 5 CONNECTION PANEL

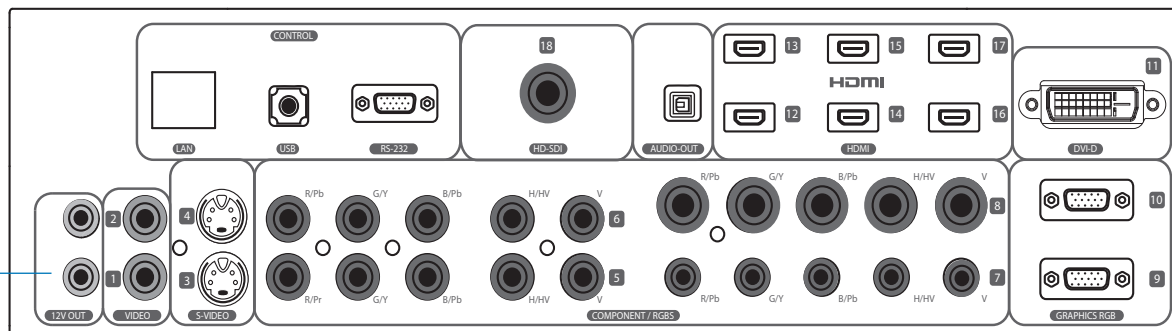

### USB - RS232 INTERFACES (Control)

Projector and HOST system functions can be controlled remotely from a PC or other dedicated devices connected to the RS232 or USB connectors on the connector panel.


Projector has one RS232 port (**only for service user**) and HOST system has one RS232 and one USB port. We recommend using high quality serial or USB cables to ensure that the electrical control signals do not deteriorate and are therefore read correctly. A specific SIM2 driver must be installed on the control PC, supplied by your dealer/distributor to use the USB port. Upon request, SIM2 will also supply further instructions on the protocol used for programming remote control systems.

### MOTORISED SCREEN OUTPUTS

Host system is equipped with 2 outputs (Voltage: 12 Vdc) for motorised projection screen and screen masking systems, used for masking off the projection area to match the projected image aspect ratio.

The TRIG1 output is activated when the projector is switched on and is de-activated when the projector is in standby mode. The TRIG2 output can be set with the Screen control adjustment in the Aspect menu.


This output is ideally suited for multiple aspect ratio screens with motorized masking systems.

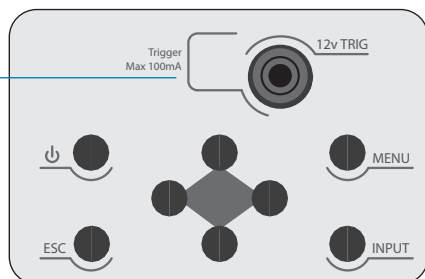


The additional 12V Trig output placed on the projector could be used to control an anamorphic lens placed in front of the projector.

### LAN - RJ45 (Control)

The HOST unit is equipped with one LAN RJ45 Port for remote control. See chapter 8 for further details.

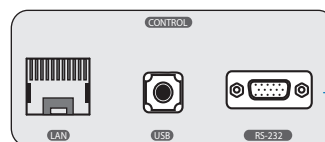

### PROJECTOR BACK PANEL

 

### INPUT USAGE SUGGESTIONS

#### (1,2) VIDEO

Television receiver, DVD player, VCR, Camcorder, video game console

#### (3,4) S-VIDEO

Television receiver, DVD player, VCR, Camcorder, video game console

#### (5,6,7,8) COMPONENT / RGBS

Television receiver, HDTV receiver, DVD player, VCR, camcorder, video game console, Blu-ray player, HD-DVD player

#### (9,10) GRAPHICS RGB

Computer

#### (11) DVI-D

HDTV receiver, DVD player, Computer

DVI-D (Non -HDCP) - The DVD-D input is not equipped with HDCP (High-bandwidth Digital Copy Protection). This input will not display images encrypted with HDCP. Some of the latest graphic cards now support HDCP. Please contact the card manufacture for more information.

#### (12,13,14,15,16,17) HDMI

HDTV receiver, DVD player, video game console, Blu-ray player.

#### (18) HD-SDI

Professional and broadcasting equipment

## 6 INSTALLATION

### POSITIONING THE 2 UNITS

The C3X Lumis HOST system is made up of two separate units (HOST and C3X Lumis projector), each of which have a power cable and are connected to each other by a 20 m long optical fibre cable. Ideally, the HOST system should be placed on the top of a cabinet. Make sure that the surface it stands on is stable and that there is sufficient space around it to permit good ventilation (at least 3 cm). Place the projector on a stable surface or use the optional ceiling mount bracket.

**! WARNING:** When using the ceiling mount bracket, the safety instructions provided with the bracket must be strictly observed. Place the projector at the desired distance from the screen: the size of the projected image depends upon the distance between the lens and the screen and the zoom setting. See the APP.1 for further details.


### CONNECTING THE TWO UNITS

The connection between the two units is made with a single cable containing three fibre optic cables each terminating in an LC connector. The standard cable length of 20 m will be sufficient for most installation requirements.

During installation of the fibre optic cable:


- The individual optical cables are delicate: always handle the main cable without touching the individual optical cables. Never pull the individual optical cables or connectors; if necessary, you may pull the main three-core cable.
- Only remove the cap protecting the connector ferrule immediately before inserting the connector; if the ferrule is allowed to come into contact with foreign material it may be damaged, making the connector unusable.
- Take particular care when inserting fibre optic connectors in their respective sockets on the rear panel of the HOST system and on the back of the Projector.
- Make sure that the single optical cables are not switched: the numbers on the cables must match the numbers on the connectors.
- Check that the connectors are correctly inserted.
- Make sure that the cable does not constitute an obstacle for persons moving around the room.
- Take care not to create knots in the cable; the minimum radius of bends in the cable is 2 cm.
- Prevent the cable from pulling and mechanical stress:

- this could cause the connectors to be pulled out and damaged.

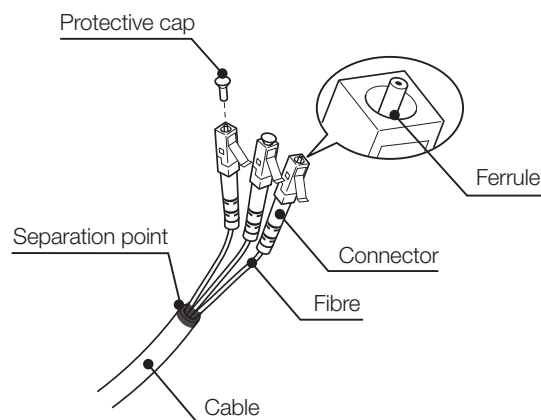


After removing the protective caps from the fibre optic cable connectors and the panel connectors, insert the fibre optic connectors carefully, matching the numbers shown on each element. Be very carefully when handling fibre optics and connectors.

### HOST - OPTICAL FIBER CONNECTIONS

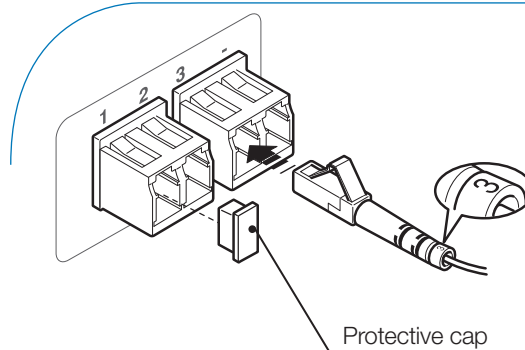

### PROJECTOR - OPTICAL FIBER CONNECTIONS

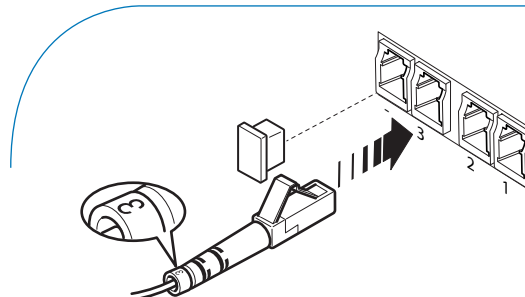

## CONTROLLING THE 2 UNITS

The remote control supplied (IR, infrared operation), permits full control of the system. It controls both the HOST™ system and the projector since both are equipped with an IR sensor on the front while the projector also has an IR receiver on the back. The two units are connected by a cable containing three optical fibres, each ending with an LC connector. The standard cable length (20m), permits even the most demanding installations.

## CONNECTIONS TO VIDEO SOURCES

Connect the cables from the video sources, the serial cable from an external control unit and the fibre optic cables for hooking up with the Projector to the rear panel of the HOST system.

To obtain the best performance from the C3X Lumis HOST system, connect the various signal sources using good quality cables designed for video applications.

Ensure that:

- the cables are routed in such a way that they do not present an obstruction to people moving around the room;
- the connectors are inserted carefully to avoid damaging the pins;
- the cables are not twisted or crushed;
- when disconnecting the cables the connectors are not violently pulled out of the connectors on the various units.

## ! WARNING:


Video sources (television receivers, VCRs, DVD players, etc.) often feature several outputs. To obtain the best performance from your system, carefully choose which output to use. Generally, the type of signal offering the best picture quality is HDMI™, followed by DVI-D, RGB, Components, S-Video and Composite Video, in that order.

However, the C3X Lumis HOST system is equipped with an excellent Video Decoder and Deinterlacer and therefore even inferior quality signals will produce high quality results.

## PROJECTOR VENTILATION

“The lamp inside the projector generates a great deal of heat, thus requiring a continuous flow of air to maintain optimum operating efficiency. The air inlet & outlet are on the sides of the projector and it is critical that these vents remain free from obstruction. SIM2 recommends a distance of 20 cm clearance each side. If the projector is to be mounted inside a “Hush Box” or a confined space then the projector must be fed a supply of cool air to maintain good ventilation.

Inadequate ventilation will result in the projector overheating, this may cause the projector to shut down randomly and will damage the lamp and significantly shorten the lamp life.”

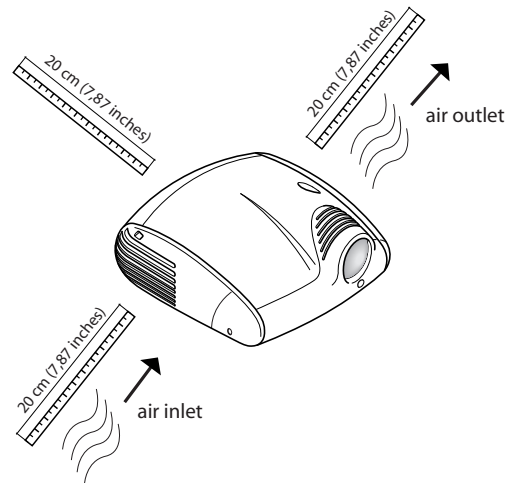

**Failure to observe the above warnings may cause the fibre optic cable to break. It is appreciated that it is not always practical or convenient but due to the fragile nature of fibre optic cables we highly recommend to test the cable prior to and after installation. Also it is good practice to examine the cable between fixes and making good just in case other trades haven't accidentally damaged the cable. All cables are fully tested prior to shipping. SIM2 cannot be held responsible for damage caused to property or incurred costs as a result of a malfunctioning cable.**



## 7 SWITCHING ON AND OFF

The C3X Lumis HOST system consists of two units (HOST system and Projector) of which the former is also the system control centre.















The system can be controlled from either the remote control (via the infrared sensors on the HOST system and on the Projector) or the keypad located on the back of the Projector or touch sensitive front panel on Host unit.

However, the power supply to the two units is separate.

After interconnecting the units via the fibre optic cable, connect them to the electrical mains supply:

1. Set the Projector power switch on the rear panel onto "I" (ON).
2. Press the Power button on the HOST system on to ON position.  
After a few seconds (system initialisation interval), the HOST system and the Projector assume stand-by mode.
3. Switching on the system:
  - with the remote control ("0-9" keys)
  - with the Projector keypad (⏻ key)

### LED SIGNALS FOR THE TWO UNITS

Status	HOST Blue Led	HOST Red Led	C3X Lumis Led	C3X Lumis Display
Standby			Red Color	-
On			Green Color	-
Cooling			Red/Green Color	-
Overtemperature			Red Color	6A
Fan Error			Red Color	60
Optical Fibre Error	-	-	Red Color	21
Optical Link Error			Red Color	22
Lamp Failure			Red Color	40

 : Off     : On     : Flashing

## 8 NETWORK FUNCTIONS


### NETWORK FUNCTIONS (RJ45 connector)

The C3X Lumis HOST system has a 10/100 Mbit Ethernet interface located on the HOST system connector panel to connect the projector to a LAN network or to the Internet. The network connection can be used to remotely control the projector from any workstation with access to the network by sending TCP/IP protocol commands.

Additionally, by suitably configuring the network specifications, you can receive e-mail notifications on the operating status of the C3X Lumis HOST system.

### Configuring network functions by OSD (network setup):

The "Network configuration" option in the "Setup" menu is displayed only when no signal is being displayed.

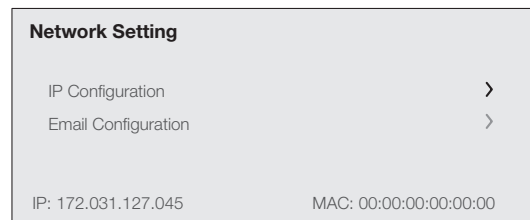

### This menu screen permits you to:

1. access the menu for setting the projector's network address;
2. access the menu for entering the e-mail address for receiving notifications on the projector status.

The projector's current IP address and MAC address (physical address) are displayed at the bottom of the screen.

N.B. The system is delivered with default factory settings, in which the dynamic IP address (DHCP) is active. If the network to which the projector is connected has no DHCP server, the current IP address displayed on screen may not be valid.

### TYPE OF IP ADDRESS

This screen permits you to select the type of IP address to be assigned:

1. Static IP: the IP address, network SUBNET and GATEWAY must be entered manually.
2. Dynamic IP (DHCP): choose this option if you want the projector IP address to be automatically assigned by the network DHCP server (in most networks the DHCP server is a router).

### REMOTE CONTROL

In order to control the projector by TCP/IP protocol, you must specify the TCP port to which the connection must be made (called TCP socket). Choose the port number and set "Port 1". If you want to establish a connection with the projector via the Internet, the port chosen for remote connection must be accessible from outside (usually a Virtual Server is created in the network router to make the projector's IP address accessible from a Personal Computer connected to the Internet).

### SAVING SETTINGS

Go to "SAVE CHANGES" to enable the chosen setup (wait for completion of the save procedure). You must also disable the Mail Server in this table (in all languages).

### RESTORING SETTINGS

To restore the projector's network setting to the default factory setting click on "Restore". Wait for completion of the restore procedure.

**IP Address Mode**

☒ **Static IP**
☐ **Dinamic IP (DHCP)**

IP Address: 172.031.127.055 
Subnet Mask: 255.255.000.000 
Gateway: 172.031.045.115 
DHCP Host Name : sim2prj

**Web interface**

Port: 08080 
Password: XXXX

**Remote Control**

Port 1: 10001 
Port 2: 30704

## DESCRIPTION OF THE NOTIFICATION MAIL SENT BY THE PROJECTOR

If the email notification service is enabled, the projector will automatically send an email to the specified address when the following circumstances occur:

1. Cooling fan error (Error Code 1)
2. Temperature too high (Error Code 2)
3. Lamp error (Error Code 3)
4. Communication error (Error Codes 4 e 5)

**Email sender:** "CCCCCCCCCCCCCCCCCCCCExxx"

C: serial code of the projector sending the notification  
X: error code

**Email subject:** "WWWWWLLLLLLFFFFFXXXXYY#"

W: Total hours of projector use

L: Hours projector lamp on

F: Software firmware version

X: Operating status:

0 – OFF

1 – ON

2 – Lamp preheating

3 – Lamp switching back on

4 – Lamp cooling

Y: Specific status:

0 – None

1 – Blank

2 – Freeze

3 – Test Pattern

## EMAIL SETTINGS

This screen is used to define the operating parameters for notification of the projector status by e-mail.

**Enabled:** notification service by email is enabled.

**Disabled:** notification service by email is disabled.

Domain name, SMTP Mail Server: parameters to be entered according to the specific network settings to which the C3X Lumis HOST projector is connected.

**Email Configuration**

☒ **Enable**
☐ **Disable**

SMTP Mail Server: 
172.031.127.066

Domain Name: 
Mail Server:

SMTP Port: 
00025

Recipient Address: 
support@mail.it

## IMPORTANT:

To save the network settings the projector needs to be rebooted, set the system to standby and wait for the cooling sequence to complete. Once the fans have stopped power off the HOST and Projector via main power switch. Wait 5 seconds and Power on the projector and HOST.

## 9 VIDEO CONNECTIONS

**ATTENTION: When switching between inputs the image is deliberately 'frozen' to allow time for the system to stabilize, during this time you may see color changes & noise on screen - this is perfectly normal and not a malfunction of the projector**

### COMPOSITE VIDEO (1-2)

Fit an RCA connector with a Composite Video (CVBS) signal to this input.

The output connector on the external appliance is normally coloured yellow and will often be labelled VIDEO.

Other signal and socket formats may be preferable (because they give better image quality), but this type of output socket is still the most commonly used, and nearly all television receivers, video recorders, DVD players and camcorders, etc. use it.

### S-VIDEO (3-4)

Fit a mini-DIN connector with an S-Video signal to this input.

The corresponding output on the external device is normally identified by the labels S-VIDEO or Y/C. This type is nearly as common as Composite Video, and is preferable to the latter, since it gives higher image quality.

### RGB - YPrPb (5-6-7-8)

These inputs use a set of 5 RCA connectors and 5 BNC connectors. RGB and Component signals can be applied to each set of connectors.

If you use the RGB inputs you can select YPrPb video mode. RGB signals may feature composite synchronisation on the green signal (RGsB), or on the HV signal.

Connect the R, G, B outputs of the source to the respective R, G, B inputs of the HOST system (taking care not to invert the positions) and any synchronisation signals to the HV. With regard to the 3 sets of RCA connectors, when hooking up, use the colours of the RCA connectors as an aid as follows: the R connector is red, G is green, B is blue and HV is white. You can use a SCART to RCA adapter cable to connect the RGB signal from a source equipped with a SCART output to this input.

The Component signals connect to the Y, Pr and Pb inputs: take care that the inputs match the outputs on the source device.

Since these may be labelled differently, refer to Table 1 to establish the correspondence between the various signals. As indicated in the table, the colours of the connectors can also be of help.

Only horizontal scanning frequencies of 15 kHz (standard video resolution) or 32 kHz or higher (high definition video, with progressive scanning, high definition video) can be applied to this input.

Progressive signals usually provide better quality than in-

terlaced signals, but if the source features both progressive and deinterlaced signal outputs it is good practice to compare the quality of the pictures reproduced by the C3X Lumis HOST in the two cases: the deinterlacing performed by the C3X Lumis HOST is often more effective than that performed by the sources themselves.

### GRAPHICS RGB / YPrPb (9-10)

This input should be connected to an RGB/YPrPb type video or graphic signal using a cable with a DB15HD type connector. The signal source device (typically a personal computer or game console) must be able to provide separate H/V synchronisation or composite H+V synchronisation.

### DVI-D (Non HDCP) (11)

This input permits you to make the best use of digital image quality. If your source has a DVI-D output (with YPrPb or RGB signal) connect it to this input.

### HDMI™ (12-13-14-15-16-17)

HDMI (High Definition Multimedia Interface) integrates an uncompressed high definition video signal with a multi-channel audio signal and allows exchange of control data between the video source and the C3X Lumis HOST.

The HDMI™ input allows connection to video sources that use the HDCP (High-Bandwidth Digital Content Protection) protocol to protect their contents. Once the video source has been connected to the HDMI™ input, internal processing by the C3X Lumis HOST separates the video information from the audio information.

You can use a DVI-D > HDMI adapter cable to connect the DVI-D signal from a source equipped with a DVI-D output.

The design of the HOST means that the connection to source equipment can be as short as possible, therefore reducing the need for long HDMI cable runs. HDMI gives the user access to some of the highest picture quality currently available today. The system uses an encryption system called HDCP (High-bandwidth Digital Copy Protection) which protects recorded media from being copied illegally via Satellite, cable, PC and the next generation of disc based systems such as Blu-Ray. The connection between source and display requires the two devices to "hand-shake" and pass to each other the encryption keys before a picture can be displayed. Therefore it is perfectly normal to experience a short delay before the picture appears on screen.

### SDI (18)

The HDSDI/SDI input permits you to connect sources with serial digital outputs in YPrPb components in compliance with the SMPTE292M (high definition) and SMPTE259M-C (standard definition) standards. The signal, of the uncompressed type, is transmitted digitally by single coaxial cable, thus guaranteeing a high level of resistance to noise and disturbance.

## 10 ON SCREEN MENU

All system functions can be operated from the keypad or remote control, with the aid of a complete, user-friendly on screen menu.


### INPUTS

The input selection menu is opened by pressing 0 on the remote control or with the SOURCE key on the projector or HOST system keypads.

To select an input, scroll through the list with the ▲ and ▼ keys until the required input is highlighted, then press ►.

Input selection menu display terminates if you press the ESC key or when the On-Screen Menu display timeout interval (set in the Setup Menu) has elapsed or after the signal has been recognised.

Some inputs can receive RGB and YCrCb signals. The input and type of signal (RGB or YPrPb) are set in the pull down menu that is displayed to the right of the symbol < when you press the key ◀.

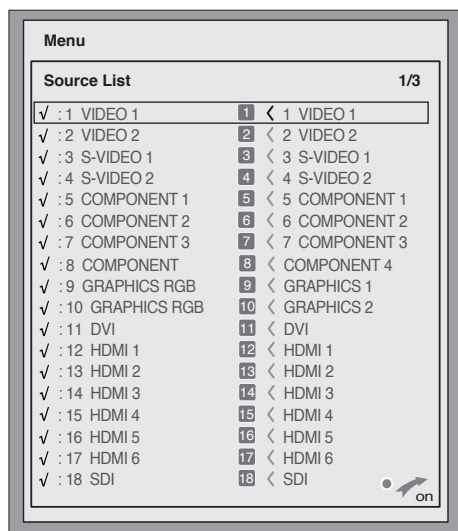


After selecting the signal that arrives from the source (using the ▲ and ▼ keys), press MENU+/MENU- to confirm and exit the pull-down menu; to the right of the < symbol, you will see the setting you have just entered.

During the short time that it takes to find the signal, a box will appear showing the signal requested. Additional information regarding the signal such as the video standard (for video signals) or definition (for graphic signals), the aspect and the current user memory can be displayed by pressing the number key on the remote control corresponding to the selected source.


In the SETUP menu you can select whether or not to display this information; for further information see SOURCE INFORMATION in the MENU section.

Information on the selected menu can be shown on the front display of the Host system by pressing the INFO key.

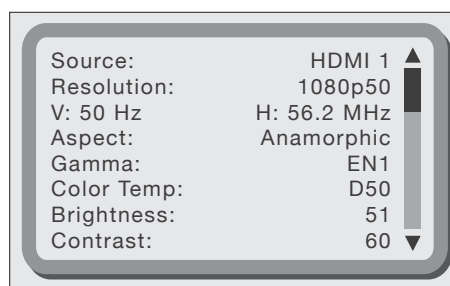

### MAIN MENU

Press the MENU key on the keypad or the MENU+ or MENU- key on the remote control to access the main menu of the On Screen Display. The main menu is divided into four windows, PICTURE, IMAGE, SETUP and MENU, in which the various adjustments are grouped according to the frequency of use. Use the ▲ and ▼ keys to select the line corresponding to the adjustment you wish to make.

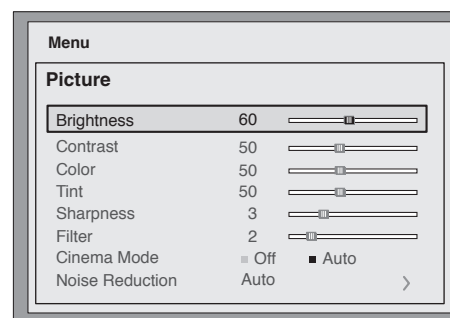

The various menus offer only adjustments corresponding to the type of input signal displayed (e.g. certain typical adjustments for video signals, not necessary for graphic signals, do not appear on the menus for the latter, and vice versa).

Some adjustments (e.g. Brightness and Contrast) are associated with a numerical value that can be modified within the set limits using the ◀ and ▶ keys.

For others (e.g. CINEMA MODE) you can choose between two options offered on the same line and selectable using the ◀ and ▶ keys.

Press the < key to access these submenus, and press the MENU+/- keys to return to the previous menu.

Press ESC on the remote control or keypad to interrupt the menu display or wait for it to disappear automatically after the number of seconds set in the SET-UP page.

## PICTURE

Press the < key to access these submenus, and press the MENU+/- keys to return to the previous menu.

Press ESC on the remote control or keypad to interrupt the menu display or wait for it to disappear automatically after the number of seconds set in the SET-UP page.

Adjustments	Inputs					
	Video S-V Video	RGBS 15kHz Y/Cb 13kHz	RGBS	Y/Cb	RGB Grafico	HDMI™ DVI SDI
Brightness`	•	•	•	•	•	•
Contrast	•	•	•	•	•	•
Color	•	•	-	•	-	•
Tint	◦	-	-	-	-	-
Sharpness	•	•	•	•	•	•
Sharpness Mode	-	-	•	•	•	•
Filter	•	•	-	-	-	-
Cinema Mode	•	•	-	-	-	-
Video Mode	•	•	-	-	-	-
Noise Reduction	•	•	-	-	-	•

◦ Present only if the Video Standard is NTSC

### BRIGHTNESS

Use this control to adjust the darker areas of the picture (black level), without affecting bright areas. Increasing the value will give more detail in darker parts of the picture. For correct adjustment it may prove useful to display a grey scale with at least twenty bands. Now try to reduce the brightness of the black band as much as possible while ensuring that it can still be distinguished from the adjacent band with brightness slightly higher than black. Alternatively use a scene composed of black objects alongside other dark coloured objects and try to ensure that all the objects can be separately identified.

### CONTRAST

Use this control to adjust the images white level without affecting its dark areas. For correct adjustment it may prove useful to display a grey scale with at least twenty bands.

Now try to increase the brightness of the white band as much as possible while ensuring that it can still be distinguished from the adjacent band with brightness slightly less than white. Alternatively use a scene composed of well-lit white objects surrounded by light objects with lower level lighting, and try to ensure that all the objects can be separately identified.

### COLOUR

This control (also called Saturation) increases or decreases the picture colour intensity. When set to zero, colour images will be shown in black and white.

Increase the value until the colours appear natural: suitable references include skin tones and grass in landscape shots.

### TINT

This adjustment controls the purity of colours. Basically it determines the red-green ratio of the picture. Decreasing the value increases the red content of the image, increasing it increases the green content. For this adjustment use skin tones or a test card image with colour bars as a reference.

### SHARPNESS

This adjustment serves to modulate the signal to increase or decrease the level of picture detail. When the sharpness value is reduced the image details appear less pronounced, while increasing the value raises image definition, making the outline of objects sharper.

Note that an excessively high value may result in a noisy picture and the edges of objects may appear unnaturally clearly defined.

### SHARPNESS MODE

This allows you to select the type of processing associated with sharpness adjustment. For an interlaced or progressive video signal, set to Video; for PC graphics signals, set to Graphics.

If the VIDEO option is set, it applies Noise Reduction to increase the clarity of the image.

### FILTER


This allows you to select the mode in which the input signal is processed. Selecting the most appropriate value for a given input signal ensures the best horizontal and vertical definition and makes the picture sharper.

### CINEMA MODE

Use this option if the video signal source is a movie film (obtained from a Telecin device with 3:2 or 2:2 pull-down). In this case a deinterlace algorithm optimised for this type of signal is applied. Selecting AUTO mode causes the deinterlacer to analyse signal characteristics and apply the correct deinterlace mode automatically.

## IMAGE

This menu features adjustments relating to picture position, aspect ratio, magnification etc.

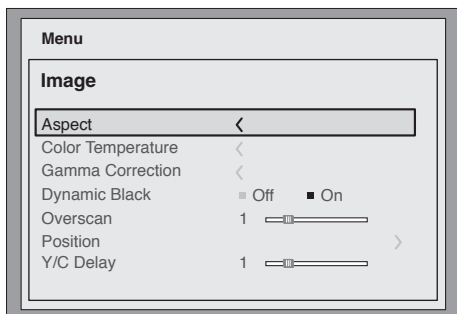

### ASPECT

This adjustment allows you to change the dimensions and aspect ratio (relationship between width and height) of the displayed image. There are six default aspects available and three user aspects (user adjustable parameters). You can select a different aspect for each source: the selected aspect ratio will be automatically applied the next time the relative source is displayed.

You can also select the required aspect ratio from the remote control by repeatedly pressing the **◀▶** key or by pressing the **◀▶** key and one of the number keys (1...9).

The following aspects are available:

#### Normal:

projects the image occupying the full height of the screen while maintaining the aspect ratio of the input signal. When the input signal aspect ratio is 4:3, black vertical bands are displayed on the right and left of the picture.

#### Anamorphic:

correctly displays a 16:9 image.

#### Letterbox:

displays a 4:3 letterbox image (source signal with black bands above and below the picture) in such a way that it fills the 16:9 screen and maintains the correct aspect.

#### Panoramic:

widens the 4:3 image cutting off a strip from the top and bottom. Panoramic is ideal for displaying a 4:3 image on the 16:9 screen of the Display.

#### Subtitles:

raises the image, to make space for subtitles.

#### Pixel to Pixel:

makes a pixel to pixel map of any image, without adapting it to the screen. The image is projected in the centre of the screen and if its horizontal and/or vertical dimensions are smaller than the display, it is bordered by vertical and/or horizontal black bands.

### User 1, 2, 3:

Use this option if none of the default aspects are satisfactory. User formulas make it possible to continuously adjust the picture size horizontally and vertically and therefore the aspect ratio too.

**With progressive HDMI signals, for all resolutions, “User” adjustment can be used only in decreasing mode: the increment mode is intentionally set to value “0”.**

## COLOUR TEMPERATURE

Changes the colour balance of the image.


You can choose one of the 5 default settings or use the user mode for manual adjustment:

### The default setting are:

NATIVE (the projector's native primary colours)  
HDTV, EBU, SMPTE-C, primary colours defined by the standards.

AUTO, mode that applies one of the standard settings described above.

PC, a mode that is available only if instructions regarding the colour temperature have been sent to the projector by a PC using the Live Colors Calibration software.

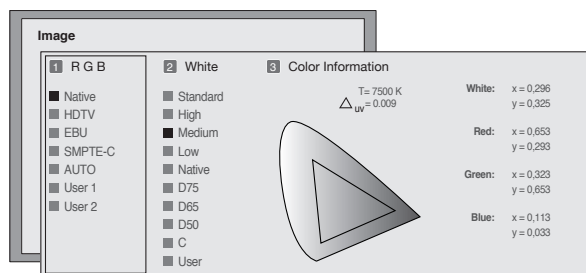

For each of the settings listed in column 1 RGB there are 9 default white balance adjustments. Press key 2 on the remote control to access the white balance adjustment menu.


### The default settings are:

STANDARD applies a certain white balance depending on the standard selected in column “1 RGB”;

HIGH - MEDIUM - LOW (default white balance levels);

NATIVE (the machines native white balance);

D75 - D65 - D50 - C standard CIE illuminants;

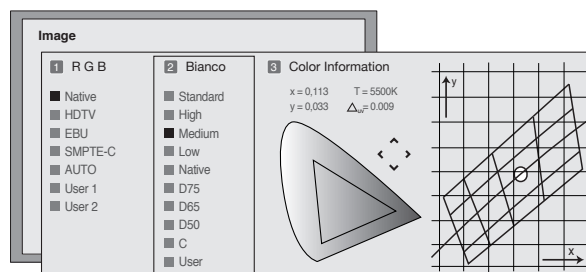



If the default white balance settings are not sufficient, you can adjust the white balance manually.

Colour temperature can be adjusted by positioning the white point within the CIE chromaticity diagram. The system permits you to place the white point inside a grid positioned in the neutral colour zone. Moving along the horizontal lines changes the related colour temperature, with low temperatures on the right (thus increasing the red content) and high temperatures on the left of the graph (thus increasing the blue content). Points along the yellow horizontal line represent the colours on the black body curve. The colour temperature along the vertical lines is constant but differs to a lesser or higher degree from the black body curve. This means that by selecting the points on the higher part of the graph you will increase the blue content. On the contrary, by selecting points in the lower part of the graph, you will increase the purple content.

## Gamma Correction

Determines the systems response to the grey scale, emphasising or attenuating the different grades of brightness (blacks, dark, medium, light greys, whites) in the projected image.

The projector has a range of gamma functions which enable you to display any image to the best effect for the type of video source, the ambient lighting and your subjective preferences. There are 3 sets of gamma curves: Standard (ST), Enhanced SIM2 (EN) and Graphics (GR). The Standard curve has been defined for general use, and is set for video cameras, digital cameras, and for viewing films or photos from your PC.

### GAMMA CORRECTION SETTINGS

#### Standard

**ST1** For general use.

#### Enhanced SIM2

**EN1** Suitable for displaying images from camcorders, digital cameras or TV studios in bright ambient light.

**EN2** Suitable for displaying images from camcorders, digital cameras or TV studios in poor ambient light.

**EN3** Suitable for projecting films in bright ambient light.

**EN4** Suitable for projecting films in moderate ambient light.

**EN5** Suitable for projecting films in controlled ambient lighting conditions.

#### Graphics

**GR1** Suitable for displaying graphic images (e.g. Windows Desktop) in moderate lighting conditions.

**GR2** Suitable for displaying graphic images in controlled lighting conditions.

The Enhanced set is suitable for watching movies. The Graphics set is suited to displaying synthetic graphics (PC desktop, CAD, PC presentations, etc.).

By selecting User you can define your own curve. You can thus select the coefficient which determines the curve. Values from 1.5 to 2.2 allow you to emphasise the detail of dark images, but reduce overall contrast. Values higher than 2.2 increase overall contrast, but reduce the detail of dark areas. For the most common video sources, by setting the value to 2.2 you can achieve pleasant and well-contrasting images.

## DYNAMIC BLACK

The C3X Lumis HOST Projector allows for custom picture contrast settings through both its "Variable Iris", set to accommodate the environment viewing light conditions, and by enabling the "Dynamic Black" function. The latter setting enables another dynamically controlled iris that reacts to the image content by considerably increasing the black level thus achieving better picture depth and detail in mid to low brightness scenes.

By enabling the Dynamic Black function in conjunction with the Variable Iris setting, you will obtain the best possible picture quality based on the installation light conditions.

## POSITION

Use this adjustment to position the image vertically and horizontally. It determines the aspect ratio of the projected image.

These parameters do not normally require adjustment because the system checks the input signal and automatically sets the most suitable values.

However, if the image is not perfectly centralised it may prove useful to request the system to repeat the input signal analysis and image positioning, by requesting the automatic control procedure with button A on the remote control or the AUTO button on the keypad. When this procedure is requested, it is helpful to project a picture with a white or light-coloured background on the screen.

## FREQUENCY/PHASE

These adjustments, available for progressive signals and for signals from a PC, ensure correspondence between the number of pixels making up the signal and the number of pixels that make up the projected image.

These parameters do not normally require adjustment because the system checks the input signal and automatically sets the most suitable values.

If however the image is disturbed (loss of resolution between equidistant vertical bands or instability and lack of detail in thin vertical lines) it may help to ask the system to rerun the input signal analysis and set the best parameters by requesting the automatic adjustment function with button A on the remote control or AUTO on the keypad.

## OVERSCAN

Eliminates irregularities around the outer borders of the image.

Some less accurate sources may produce an image with uneven borders; thanks to the overscan function these

imperfections can be moved outside the displayed area. Setting the parameter to 2.2, typically yields pleasant, well-contrasted images. For most common video sources, the overscanning setting may be from 0 (no overscan) to 32 (highest setting).

The resulting image always maintains the selected aspect

### Y/C DELAY


Where Video and S-Video signals are concerned, it may be necessary to correct horizontal colour misalignment within the projected image. For a given video standard (e.g. PAL or NTSC) the stored value does not normally require further fine-tuning, unless the source or connection cable is changed.

## SETUP

The setup menu groups adjustments that have an impact on the image characteristics. Any adjustments not available for a given input will not be displayed in the menu. The following table summarises the adjustments available for each input.

### ORIENTATION


Reverses the image vertically and horizontally to best fit the installation: i.e. desktop front, ceiling front, desktop rear and ceiling rear.

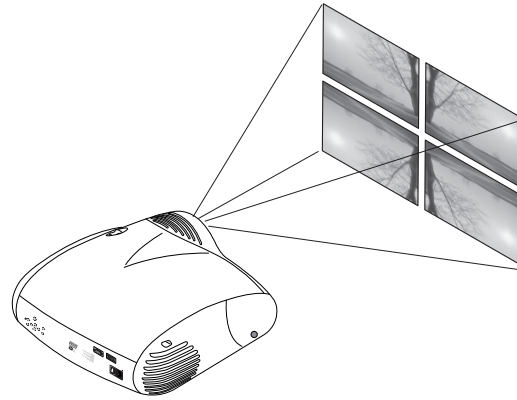

### VERTICAL KEYSTONE

To achieve the maximum image quality, we recommend installing the projector on a surface which is perpendicular to the screen. If the projected image is not level, adjust the feet on the bottom of the projector to bring it into a level position, lining up the base of the projected image with the base of the projection screen (Fig.26).

If this adjustment is insufficient to centre the image, tilt the projector and use the vertical/horizontal keystone adjustment to compensate for the resulting distortion.

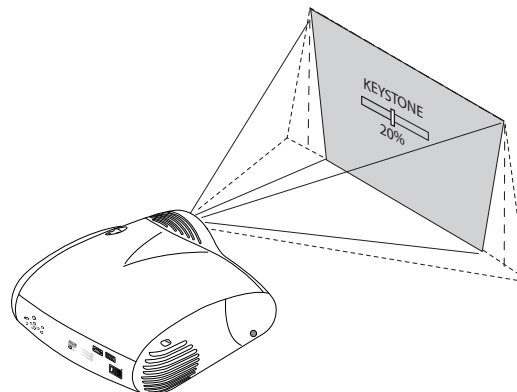

### POWER ON

If selected (AUTO), this option permits the system to be switched on whenever the projector is connected to the mains power supply, provided that the mains switch next to the fuse holder is turned on.

In STANDBY mode the projector remains in STANDBY mode and awaits the power-up command from the remote control or keypad.

**VARIABLE IRIS**

The C3X Lumis HOST features a variable iris which allows users to choose between High Contrast or Optimum Picture modes. The Iris control is accessed via the OSD. Press Menu +/- on the remote control repeatedly, until the 'Setup' page is displayed.

**Open:** Use this setting to get optimum performance from the projector. This will give the ideal balance between Contrast, Brightness & Colour. SIM2 recommends this setting for Home Theatre applications.

**Closed:** Use this setting to achieve a higher contrast. By closing the Iris, Brightness and Colour performance will be reduced.


**LAMP POWER**

If your projection room is especially dark, the images projected by the C3X Lumis HOST system may appear to be excessively bright.

Use the LAMP POWER function to reduce the power used to operate the lamp while achieving maximum image quality. In this way, the brightness of the image will be adapted to your projection conditions and a longer life.


**TEST PATTERNS**

Displays a series of eight test patterns, which are useful when installing the system and checking basic functions. Use the ◀ and ▶ keys to select the various test patterns.

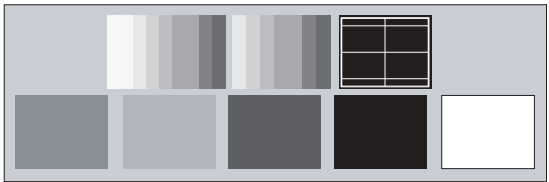

**INITIAL SETTINGS**

Resets the projector to its initial factory settings (except Position, Orientation, Y/C Delay, Zoom and Focus). Before performing the operation, the system will request confirmation.

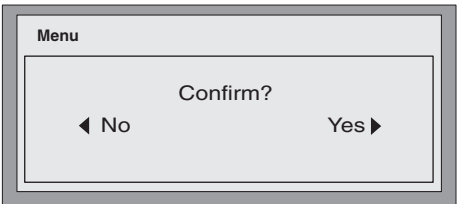


**MENU**

Makes it possible to select one of the languages available for the On Screen Display menus.

**SOURCE LIST**

In order to make the C3X Lumis HOST system increasingly flexible, the functions described below make it possible to modify the input selection menu and adapt it so that it matches the requirements of the user more closely.

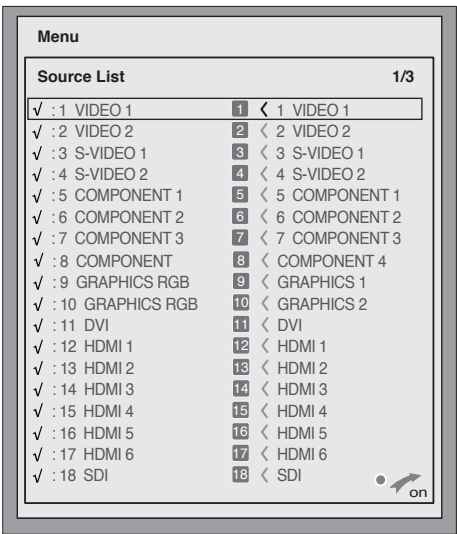

The main page displays all the source inputs physically connected to the projector.


You can delete any inputs which are not in use. To do this, select the input in the pull down menu which appears when you press ◀, and choose whether to enable or disable the input. Enabling or disabling of sources will automatically cause the renumbering of the remaining active inputs.

Active video signal sources (shown in the input selection menu) are ticked. It may be useful to identify the input with a user defined name rather than the type of signal (for example, with the name of the connected device).

When you have decided to display an input, select NAME in the pull-down menu and rename the source currently in use. This makes it easier to remember which source is connected to a given input; you can use up to 12 alphanumeric characters for the name (for further details, see ENTERING TEXT).

### Entering text

The text entry menu makes it possible to enter text quickly and easily.

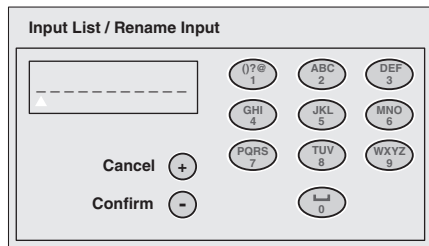

Text input mode is the same whether you are editing an existing name or entering a name for the first time. Characters can be entered in any of the available positions (represented by horizontal lines). Use the ◀ and ▶ keys to move the cursor left or right respectively.


Press the number key corresponding to the character; pressing once selects the first character, twice, the second character and so forth. The available characters are shown in the text entry menu that appears in this setup mode. Once you have entered a character, move to the next space on the right to enter the next with the ▶ key on the remote control, and repeat the procedure. This applies even if the letter is associated with the same key as before. Use the ▲ key to switch from upper case to lower case characters and vice versa. Cancel errors with ▼ after selecting the character to be cancelled. Once you have completed the text entry procedure confirm your text and save it by pressing the MENU+ key on the remote control. If you wish to cancel the changes, press MENU- on the remote control.

### F1-F2 KEYS

The remote control is equipped with two keys (F1 and F2) which are associated with various different functions (Fig 31). The screen has six options, one for each line, and two columns indicating the keys F1-F2. You can select F1 and

F2 with the keys ◀ and ▶ on the remote control; select the function to assign to F1 or F2 with the keys ▼ and ▲.

The function performed by the key is confirmed by the appearance of a dot on the corresponding column-row intersection.

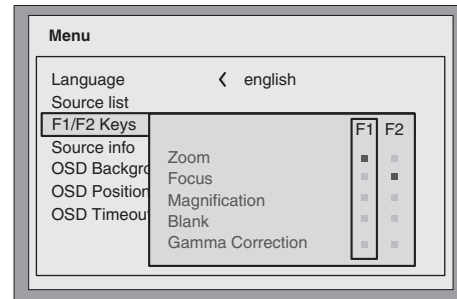

### Zoom

Controls the motorised lens zoom, permitting you to zoom in or out, enlarging or shrinking the projected image. By pressing the • button on the remote control next to the menu (zoom/focus) you can display a pattern that aids zoom/focus operations.

This permits you to access the optic zoom control, where the ◀ and ▶ keys zoom in and out.

### Focus

When selected, the ◀ and ▶ keys adjust the focus.

### Magnification

Activates the electronic zoom, the keys ◀ and ▶ zoom in on the image. If you press the key again you will enter PAN mode in which the ◀ and ▶, ▼ and ▲ keys enable you to pan over the enlarged image. When the ▼ key is pressed a third time, the system resets the projector to original viewing settings.

### Blank

Switches off the video signal and displays a blank screen. As soon as the key is pressed an OSD message lasting a few seconds confirms that the function has been activated. You can restore the previous conditions by pressing any key on the remote control.

### Gamma correction

Successive pressing of the key in question (F1 or F2) makes it possible to select any of the available gamma curves.

### SOURCE INFORMATION

When enabled (YES) each time the source is changed information regarding the signal type is displayed. If disabled, (NO) no information on the source is displayed.

### OSD BACKGROUND


Determines the type of background for the On Screen Display (opaque or transparent).

## OSD DISPLAY TIMEOUT

Determines the On Screen Display timeout after the last event (adjustment using remote control or keypad). The adjustment is made using the ◀ (decrease) and ▶ (increase) keys within a 6-200 second timeframe.

## OSD POSITION

Positions the On Screen Display in a particular area of the projected image. The OSD can be positioned using the arrow keys for fine adjustments or keys 1...9 on the remote control to select one of 9 preset positions.

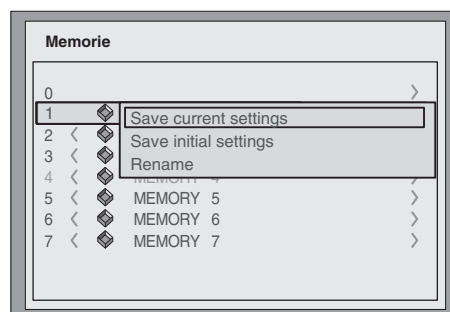

## USING A MEMORY

To use a Memory, select the line in question and press the ▶ key. The settings stored in the memory you have selected will be applied to the projected image, while a message will confirm that Memory has been applied. The memory will be associated with the particular source and signal type and will be automatically applied whenever that particular combination of source and signal type is selected.

## RESTORING INITIAL SETTINGS FOR A MEMORY

When you need to restore the initial settings in a Memory that has previously been modified, select the line referring to the Memory in question and open the corresponding pull-down menu (key ◀). Then select the "Save initial settings" line. A message stating "Initial settings saved in Memory 1" will appear at the bottom of the display.

## RENAMING A MEMORY


All Memories can be named. To assign a name (with a maximum length of 12 alphanumeric characters) to a Memory, select the Rename option from the corresponding pull-down menu. Enter the text as described in the paragraph Text Entry.

## RESTORING CURRENT SETTINGS

When you enter the MEMORIES menu a copy of the current settings is saved in a temporary memory (marked 0 - AUTO). Once one or more memories have been recalled, you can restore the settings that were effective at the moment the Memories menu was accessed by selecting Memory 0 (0 - AUTO). Note that this operation must be performed before the Memories menu page disappears (30 seconds after the last operation with the remote control or keypad). The next time it appears, in fact, the temporary memory will contain new information that takes account of any Memories selected on the last time but one that the MEMORIES page was accessed.

Memory 0 can be used even when you do not wish to enable Memories management for the signal in use. In fact, once Memory 0 has been selected, when a source is chosen, the settings that were effective at the time the Memory was previously recalled will be automatically applied.

## INFO

Displays the current operating status of the projector and information concerning the projected video/graphic signal. This function is displayed by pressing the  key on the re-

# SPECIAL REMOTE CONTROL KEYS

## MEMORIES


The main picture parameters can be saved in discrete sets of values called Memories so that they can be subsequently applied as a group using a single command.

There are 6 separate Memories (Memory 1, Memory 2.... -6) for each of the 14 signal types handled.

The following image parameters can be saved/recalled by the Memory Management system:

Image	Picture
BRIGHTNESS	ASPECT
CONTRAST	COLOR TEMPERATURE
COLOUR	OVERSCAN
TINT	GAMMA CORRECTION
SHARPNESS	
FILTER	
NOISE REDUCTION	

Some of these parameters may not be available for certain inputs or certain input signals, as indicated in Tables 4 and 5.

The Memory Management function menu page is activated by pressing the  key on the remote control.

## SAVING A MEMORY

To save the current image settings in Memory 1, move the cursor to line 1 using the ▼ and ▲ keys and open the drop-down menu by pressing the ◀ key. Select the "Save current settings" line. The message "Current settings saved" will be shown at the bottom of the display to confirm that the operation has been completed. Repeat the operation to save other image settings in new memories.

mote control (or, when the On Screen Display is not enabled, the ► key on the keypad).

### QUICK MENUS

The quick menus provide access to the main adjustments that affect image quality without opening the main menu. BRIGHTNESS, CONTRAST, COLOUR, TINT, SHARPNESS, FILTER and NOISE REDUCTION adjustments appear at the bottom of the screen one after the other when the ▼ and ▲ keys are pressed.

### MESSAGES

The following messages may appear on your screen:

#### No signal:

The system does not recognise any signal applied to the selected input. In this case:

- Make sure the selected input is connected to a video or graphic signal and that that source is functioning correctly.
- Check the condition of the cables used to connect the system to the various sources.
- Make sure the video or graphic signals supplied by the source are compatible with the system's technical specifications and, in particular, with those of the selected input.

#### Out of range

This message appears when either the resolution or the vertical/horizontal frequency of the input signal exceeds system specifications (e.g. a QXGA graphic signal).

## 11 CLEANING AND MAINTENANCE

The HOST system do not require internal adjustments and do not contain any user-serviceable parts.

To change the lamp, or for any repairs, always contact your nearest technical service centre that will resolve all your problems in a courteous and efficient manner.

To clean the outer cover of the projector use a soft cloth and moisten slightly if necessary with water and a small amount of neutral soap. Do not rub hard on the printed captions on the rear panel.

The lens may be cleaned with a very soft, non-abrasive small brush, in order to remove dust particles. Alternatively, use a soft dry cleaning cloth (of the type used for camera lens cleaning) to remove fingerprints and grease marks.

## 12 TROUBLESHOOTING GUIDE

### NO POWER (LEDs ALWAYS OFF)

- Check that the projector's power switches are turned on.
- Check that the power cables are correctly connected to the projector's power sockets.
- Check the condition of the fuse located next to the power socket at the rear of the projector.
- Replace the fuse located on the projector's power socket with an identical type (T 3,15A H).
- If the fuse blows repeatedly, seek technical assistance from your nearest service centre.

### LAMP FAILS TO SWITCH ON

- If this happens immediately after the last time the unit was switched off, allow a few minutes between switching off and switching on again. This will allow the lamp to cool down to the optimum temperature for switching on.
- If the lamp fails to light - even though the unit has had time to cool down - seek technical assistance from your nearest service centre.
- Check the state of the connection by using Table 1 to interpret the code displayed by the system LEDs.
- Reset the Projector & HOST by turning off the power on both units. Wait 10 seconds before powering on again.
- Check fibre Optic cable connections on Projector and Host.

### NO IMAGE

- Make sure the selected input is connected to a video or graphic signal and that that source is functioning correctly.
- Check that the source is HDCP compliant, you will not get a picture using encrypted material via the DVI-D input.
- Make sure the video or graphic signals supplied by the source are compatible with the C3X Lumis HOST system's technical specifications and, in particular, with those of the selected input.
- Check the condition of the cables used to connect the projector to its input sources.
- Check the state of the connection by interpreting the code displayed by the system LEDs.
- Make sure the cooling air vents on the units are not blocked and that the room temperature is below 35°C.

### PICTURE OK ON 1080i & 720P MATERIAL BUT NO PICTURE DISPLAYED IN 1080P 60HZ/50HZ?

- This usually means that the HDMI cable has insufficient bandwidth to pass 1080p 60hz/50hz. This is quite common on cheap cables and also excessively long cables. We suggest using better quality cables and as short as possible, avoid cables in excess of 10mtrs.



### WHEN USING AN EXTERNAL HDMI SWITCHER OR AV AMP, SOME TIMES WHEN SWITCHING INPUTS I DO NOT GET A PICTURE

- First of all bypass the switcher and connect directly to the projector and check that all cable are OK. Change to a lower resolution if your source is set to 1080p 50/60Hz, try at 1080i - if the picture comes on then it suggests there are bandwidth or compatibility issues of the switcher, check with the manufacturer to see if there are any software updates for the AV Amp or switcher. Try unplugging the HDMI cable from the HOST and plug in again to activate the "hot plug" detection, also try this for all other HDMI inputs.

### COLORED SPARKLES ON SCREEN

- Occasional appearances of color flashes and sparkles appear on screen when set to 1080p 50/60hz. This can happen as a result of lower quality switchers and cables, try a lower resolution.

### IMAGE IS DISTURBED, UNSTABLE OR NOISY

- Check compatibility of the video or graphic signals with the technical specifications of the system, and specifically, with the specifications of the selected input.
- Check all cables.
- If the problem occurs on a terrestrial broadcast source signal, check that the receiver has been correctly tuned in and that the aerial system is in good working order.
- If the problem occurs in a video signal from a video recorder, ensure that the videotape is in good condition and that VCR mode is active in the PICTURE menu.
- Adjust the Sharpness parameter in the PICTURE menu to optimise the projected image.
- If using a Blu-Ray or HDVD high definition disc player please be aware that material recorded on the disc may be encoded with frame rate of 1080p 24Hz which represents the same format as shown in a movie theater. Quite often the movie trailers, on screen warnings, menu's and special features will be recorded at a different rate as the main feature such as 1080i25/30Hz etc. Therefore, depending on how your player is set up the projector will appear to be "hunting" for the correct signal and sometimes it will display "No Signal" while the player is synchronising to the correct format. On these occasions - a few seconds of the program start maybe missed while the projector stabilizes. This is a normal characteristic and not considered to be a malfunction.

### INCOMPLETE IMAGE ALONG BORDERS

- Check compatibility of the video or graphic signals with the technical specifications of the system, and specifically, with the specifications of the selected input.
- Open the automatic image adjustment function by pressing the key A on the remote control or on the projector's keypad.
- Adjust the horizontal or vertical position of the image with the IMAGE/POSITION menu (if available for the input in question).
- Adjust the image width and height, selecting Aspect in the IMAGE /ASPECT menu.
- Adjust the overscan setting applied to the image on the

IMAGE/OVERSCAN menu.

### IMAGE TOO DARK/PALE OR UNNATURALLY COLOURED

- Check compatibility of the video or graphic signals with the technical specifications of the system, and in particular, with the specifications of the selected input.
- Adjust the Contrast, Brightness, Colour and Tint parameters in the PICTURE menu.
- If necessary, adjust Colour Temperature and Gamma Correction (IMAGE menu).

### GRAPHIC IMAGE WITH POOR QUALITY VERTICAL DETAIL

- Check compatibility of the video or graphic signals with the technical specifications of the system, and in particular, with the specifications of the selected input.
- Press key A on the remote control or on the projector keypad to execute automatic adjustments.
- Adjust the Frequency and Phase settings in the IMAGE menu to optimise the vertical details of the image (if available for the input in question).

### VIDEO IMAGE SHOWING COLOUR MISALIGNMENT ON VERTICAL DETAILS

- Check compatibility of the video or graphic signals with the technical specifications of the system, and in particular, with the specifications of the selected input.
- Adjust Y/C Delay settings in the IMAGE menu to reduce colour misalignment.

### REMOTE CONTROL DOES NOT WORK

- Check remote control battery power and that they are inserted correctly.
- Ensure the area between the infrared sensors (on the front panel of the projector) and the remote control is free from obstructions.
- Make sure the infrared sensors on the front and rear of the projector are not exposed to very bright light levels.

## 13 OPTIONAL ACCESSORIES

You can purchase the following optional accessories at your Dealer:

1. C3X LUMIS ceiling bracket
2. C3X LUMIS motorized bracket for anamorphic lens
3. Anamorphic lens
5. IR repeater

A range of lenses are available from our dealers to satisfy varying installation and projection distance needs. See the Additional Information chapter for further details on projection distance and enlargement ratios.

Always contact our service centre to have the lens replaced. Use only original or **SIM2 Multimedia** approved accessories.

**WARNING: for ceiling/wall installation, using a suspension bracket, carefully follow the instructions and safety regulations provided with the bracket in the packaging.**

### WHEN USING AN EXTERNAL HDMI SWITCHER OR AV AMP, SOME TIMES WHEN SWITCHING INPUTS I DO NOT GET A PICTURE

- First of all bypass the switcher and connect directly to the projector and check that all cable are OK. Change to a lower resolution if your source is set to 1080p 50/60Hz, try at 1080i - if the picture comes on then it suggests there are bandwidth or compatibility issues of the switcher, check with the manufacturer to see if there are any software updates for the AV Amp or switcher. Try unplugging the HDMI cable from the HOST and plug in again to activate the "hot plug" detection, also try this for all other HDMI inputs.

### COLORED SPARKLES ON SCREEN

- Occasional appearances of color flashes and sparkles appear on screen when set to 1080p 50/60hz. This can happen as a result of lower quality switchers and cables, try a lower resolution.

### IMAGE IS DISTURBED, UNSTABLE OR NOISY

- Check compatibility of the video or graphic signals with the technical specifications of the system, and specifically, with the specifications of the selected input.
- Check all cables.
- If the problem occurs on a terrestrial broadcast source signal, check that the receiver has been correctly tuned in and that the aerial system is in good working order.
- If the problem occurs in a video signal from a video recorder, ensure that the videotape is in good condition and that VCR mode is active in the PICTURE menu.
- Adjust the Sharpness parameter in the PICTURE menu to optimise the projected image.
- If using a Blu-Ray or HDVD high definition disc player please be aware that material recorded on the disc may be encoded with frame rate of 1080p 24Hz which represents the same format as shown in a movie theater. Quite often the movie trailers, on screen warnings, menu's and special features will be recorded at a different rate as the main feature such as 1080i25/30Hz etc. Therefore, depending on how your player is set up the projector will appear to be "hunting" for the correct signal and sometimes it will display "No Signal" while the player is synchronising to the correct format. On these occasions - a few seconds of the program start maybe missed while the projector stabilizes. This is a normal characteristic and not considered to be a malfunction.

### INCOMPLETE IMAGE ALONG BORDERS

- Check compatibility of the video or graphic signals with the technical specifications of the system, and specifically, with the specifications of the selected input.
- Open the automatic image adjustment function by pressing the key A on the remote control or on the projector's keypad.
- Adjust the horizontal or vertical position of the image with the IMAGE/POSITION menu (if available for the input in question).
- Adjust the image width and height, selecting Aspect in the IMAGE /ASPECT menu.
- Adjust the overscan setting applied to the image on the

IMAGE/OVERSCAN menu.

### IMAGE TOO DARK/PALE OR UNNATURALLY COLOURED

- Check compatibility of the video or graphic signals with the technical specifications of the system, and in particular, with the specifications of the selected input.
- Adjust the Contrast, Brightness, Colour and Tint parameters in the PICTURE menu.
- If necessary, adjust Colour Temperature and Gamma Correction (IMAGE menu).

### GRAPHIC IMAGE WITH POOR QUALITY VERTICAL DETAIL

- Check compatibility of the video or graphic signals with the technical specifications of the system, and in particular, with the specifications of the selected input.
- Press key A on the remote control or on the projector keypad to execute automatic adjustments.
- Adjust the Frequency and Phase settings in the IMAGE menu to optimise the vertical details of the image (if available for the input in question).

### VIDEO IMAGE SHOWING COLOUR MISALIGNMENT ON VERTICAL DETAILS

- Check compatibility of the video or graphic signals with the technical specifications of the system, and in particular, with the specifications of the selected input.
- Adjust Y/C Delay settings in the IMAGE menu to reduce colour misalignment.

### REMOTE CONTROL DOES NOT WORK

- Check remote control battery power and that they are inserted correctly.
- Ensure the area between the infrared sensors (on the front panel of the projector) and the remote control is free from obstructions.
- Make sure the infrared sensors on the front and rear of the projector are not exposed to very bright light levels.

## 13 OPTIONAL ACCESSORIES

You can purchase the following optional accessories at your Dealer:

1. C3X LUMIS ceiling bracket
2. C3X LUMIS motorized bracket for anamorphic lens
3. Anamorphic lens
5. IR repeater

A range of lenses are available from our dealers to satisfy varying installation and projection distance needs. See the Additional Information chapter for further details on projection distance and enlargement ratios.

Always contact our service centre to have the lens replaced. Use only original or **SIM2 Multimedia** approved accessories.

**WARNING: for ceiling/wall installation, using a suspension bracket, carefully follow the instructions and safety regulations provided with the bracket in the packaging.**

## 14 TECHNICAL SPECIFICATIONS

### ELETTRONICS

#### Input signals:

- **2 COMPOSITEVIDEO (CVBS)**  
gilded RCA type connectors  
1.0 V<sub>pp</sub> / 75 Ω, negative synchronisation
- **2 S-VIDEO (Y/C)**  
4 pin mini-DIN connectors  
Y: 1.0 V<sub>pp</sub> / 75 Ω, negative synchronisation  
C: 0.286 V<sub>pp</sub> / 75 Ω, [NTSC burst rated level]  
0.3 V<sub>pp</sub> / 75 Ω [PAL, SECAM burst rated level]
- **1 SETS OF 5 BNC CONNECTORS (YPRPB/RGB)**
- **3 SETS OF 5 RCA CONNECTORS (YPRPB/RGB)**
- Component signal  
Y: 1.0 V<sub>pp</sub> / 75 Ω, negative or 3 level synchronisation [HDTV]  
PrPb: 0.7 V<sub>pp</sub> / 75 Ω
- RGB Signal  
R,B: 0.7 V<sub>pp</sub> / 75 Ω  
G: 0.7 V<sub>pp</sub> / 75 Ω, HV synchronisation  
1.0 V<sub>pp</sub> / 75 Ω, negative or 3 level synchronisation [HDTV]  
Positive or negative TTL, 5 V<sub>pp</sub> / 1 kΩ
- **2 RGBHV (RGB analogic)**  
female DB15HD-type connectors  
R,B: 0.7 V<sub>pp</sub> / 75 Ω  
G: 0.7 V<sub>pp</sub> / 75 Ω, separate H, V or HV synchronisation  
1.0 V<sub>pp</sub> / 75 Ω, negative or 3 level synchronisation [HDTV]  
Positive or negative TTL, 5 V<sub>pp</sub> / 1 kΩ
- **6 HDMI HDCP**
- **1 DVI-D**
- **1 SDI**

#### Control:

HOST system: Keypad on rear input panel, remote control, RS232 from PC or home automation devices, USB  
Projector: Keypad on rear input panel, remote control, RS232 from PC or home automation devices

#### Horizontal frequency:

from 15 to 80 kHz (up to UXGA format @ 65 Hz)

#### Vertical frequency:

24Hz ~ 30Hz - 48Hz ~ 100Hz

#### Video standard:

automatic selection (PAL B,G,H,I,M,N,60, SECAM, NTSC 3.58 and 4.43)

#### High definition standard:

ATSC HDTV (480p, 720p, 1080i, 1080p)

#### Graphic standards:

VGA, SVGA, XGA, SXGA, UXGA

#### Colour temperature:

from 5500K to 9000K

#### Outputs:

3 jack connectors (12V 100mA) (1 active when system powered, 1 active when 16:9 aspect ratio selected, 1 for anamorphic lens on projector rear panel)

#### Image shift range:

+50% image

### GENERAL: PROJECTOR

#### Power cable:

(EU, UK and US); 2m long  
from 100 to 240 VAC, +/- 10% tolerance

#### Power supply:

Frequency from 48 to 62 Hz

#### Power consumption:

420 W Max

#### Fuse:

FUSE T 10A L H 250V

#### Dimensions:

458 x 210 x 455 mm (WxHxD)  
15,02 x 6,88 x 14,92 inches (WxHxD)

#### Weight (approx):

11 kg

#### Operating temperature:

10 to 35°C

#### Shipping temperature:

-15 to 55°C

#### Storage temperature:

-15 to 55°C

#### Humidity:

20% to 95% without condensation

#### Safety:

EN 60950

#### Portability:

considered "desktop equipment"

#### Electromagnetic compatibility:

EN 55022 Class B

EN 55024

EN 61000-3-2

EN 61000-3-3

UL approval in progress

IEC 68-2-31, IEC 68-2-32

#### Transport:

### GENERAL: HOST

#### Power cable:

(EU, UK and US); 2m long

#### Power supply:

from 100 to 240 VAC

+/- 10% tolerance

Frequency from 48 to 62 Hz

#### Power consumption:

30W max

#### Fuse:

T 3,15 A H, 5 x 20 mm

#### Dimensions:

438 x 90 x 301 mm (WxHxD)

14,4 x 32,9 x 11,8 inches (WxHxD)

#### Weight (approx.):

2,5 Kg

#### Operating temperature:

10 to 35°C

#### Shipping temperature:

-15 to 55°C

#### Storage temperature:

-15 to 55°C

#### Humidity:

20% to 95% without condensation

#### Safety:

EN 60950

#### Portability:

considered "desktop equipment"

#### Electromagnetic compatibility:

EN 55022 Class B

EN 55024

EN 61000-3-2

EN 61000-3-3

UL approval in progress

IEC 68-2-31, IEC 68-2-32

#### Transport:



## **APPENDIX**

PROJECTION DISTANCES  
INSTALLATION INSTRUCTIONS  
C3X Lumis DIMENSIONS - HOST DIMENSIONS

## APP.1 PROJECTION DISTANCES 16:9

### Metric Measure

SCREEN			PROJECTION DISTANCE						Height offset* (Ho)	
Screen Size (Diagonal)	Screen Width	Screen Height	T1		T2		T3			
			Min Projection Distance	Max Projection Distance	Min Projection Distance	Max Projection Distance	Min Projection Distance	Max Projection Distance	Min. Offset	Max. Offset
Inches	cm	cm	m	m	m	m	m	m	cm	cm
60	133	75	1,80	2,22	2,32	3,10	3,45	5,18	37	0
80	177	100	2,41	2,97	3,13	4,16	4,60	6,91	50	0
90	199	112	2,72	3,35	3,52	4,69	5,18	7,77	56	0
100	221	125	3,03	3,73	3,92	5,22	5,76	8,63	62	0
110	244	137	3,34	4,10	4,32	5,75	6,33	9,50	68	0
120	266	149	3,65	4,48	4,72	6,38	6,91	10,36	75	0
150	332	187	4,58	5,62	5,93	8,24	8,63	12,95	93	0
180	398	224	5,52	6,76	7,13	9,96	10,36	15,54	112	0
220	487	274	6,75	8,28	8,74	12,18	12,66	18,99	137	0
250	553	311	7,68	9,41	9,96	13,84	14,39	21,58	156	0
300	664	374	9,22	11,32	11,94	16,60	17,27	25,90	187	0

(\*) Height offset= H-screen center - H-lens center (in floor position)

### British and U.S System

SCREEN			PROJECTION DISTANCE						Height offset* (Ho)	
Screen Size (Diagonal)	Screen Width	Screen Height	T1		T2		T3			
			Min Projection Distance	Max Projection Distance	Min Projection Distance	Max Projection Distance	Min Projection Distance	Max Projection Distance	Min. Offset	Max. Offset
Inches	cm	cm	m	m	m	m	m	m	cm	cm
60	52,3	29,4	5,9	7,28	7,63	10,17	11,33	17	14,7	0
80	69,7	39,2	7,9	9,74	10,26	13,65	15,11	22,66	19,6	0
90	78,4	44,1	8,92	10,98	11,54	15,37	17	25,49	22,1	0
100	87,2	49,0	9,95	12,23	12,86	17,14	18,88	28,33	24,5	0
110	95,9	53,9	10,97	13,46	14,17	18,88	20,77	31,16	27,0	0
120	104,6	58,8	11,98	14,7	15,47	20,92	22,66	33,99	29,4	0
150	130,7	73,5	15,01	18,44	19,45	27,02	28,33	42,49	36,8	0
180	156,9	88,2	18,11	22,17	23,4	32,68	33,99	50,99	44,1	0
220	191,7	107,9	22,15	27,16	28,68	39,95	41,55	62,32	53,9	0
250	217,9	122,6	25,2	30,89	32,67	45,39	47,21	70,82	61,3	0
300	261,5	147,1	30,24	37,13	39,18	54,47	56,65	84,98	73,5	0

(\*) Height offset= H-screen center - H-lens center (in floor position)

## APP.1 PROJECTION DISTANCES 2.35.1

### Metric Measure

SCREEN			PROJECTION DISTANCE						Height offset* (Ho)	
Screen Size (Diagonal)	Screen Width	Screen Height	T1		T2		T3			
			Min Projection Distance	Max Projection Distance	Min Projection Distance	Max Projection Distance	Min Projection Distance	Max Projection Distance	Min. Offset	Max. Offset
Inches	cm	cm	m	m	m	m	m	m	cm	cm
60	140	60	1,43	1,76	1,84	2,45	2,74	4,10	30	0
80	187	80	1,91	2,35	2,48	3,30	3,65	5,47	40	0
90	210	90	2,15	2,65	2,79	3,71	4,10	6,15	45	0
100	234	99	2,40	2,95	3,10	4,14	4,56	6,84	50	0
110	257	109	2,65	3,25	3,42	4,56	5,01	7,52	55	0
120	280	119	2,89	3,55	3,73	5,05	5,47	8,21	60	0
150	351	149	3,62	4,45	4,69	6,52	6,84	10,26	75	0
180	421	179	4,37	5,35	5,65	7,89	8,21	12,31	90	0
220	514	219	5,35	6,56	6,92	9,64	10,03	15,04	109	0
250	584	249	6,08	7,46	7,89	10,96	11,40	17,10	124	0
300	701	298	7,30	8,96	9,46	13,15	13,68	20,51	149	0

(\*) Height offset= H-screen center - H-lens center (in floor position)

### British and U.S System


SCREEN			PROJECTION DISTANCE						Height offset* (Ho)	
Screen Size (Diagonal)	Screen Width	Screen Height	T1		T2		T3			
			Min Projection Distance	Max Projection Distance	Min Projection Distance	Max Projection Distance	Min Projection Distance	Max Projection Distance	Min. Offset	Max. Offset
Inches	cm	cm	m	m	m	m	m	m	cm	cm
60	55,2	23,5	4,68	5,76	6,04	8,05	8,97	13,46	11,7	0
80	73,6	31,3	6,26	7,71	8,12	10,81	11,97	17,95	15,7	0
90	82,8	35,2	7,07	8,7	9,14	12,18	13,46	20,19	17,6	0
100	92,0	39,2	7,88	9,69	10,18	13,58	14,96	22,43	19,6	0
110	101,2	43,1	8,69	10,66	11,22	14,95	16,45	24,68	21,5	0
120	110,4	47,0	9,48	11,65	12,25	16,57	17,95	26,92	23,5	0
150	138,0	58,7	11,89	14,61	15,4	21,4	22,43	33,65	29,4	0
180	165,6	70,5	14,34	17,56	18,53	25,89	26,92	40,38	35,2	0
220	202,4	86,1	17,54	21,51	22,72	31,64	32,9	49,36	43,1	0
250	230,0	97,9	19,96	24,46	25,87	35,95	37,39	56,09	48,9	0
300	276,0	117,5	23,95	29,41	31,03	43,14	44,87	67,3	58,7	0

(\*) Height offset= H-screen center - H-lens center (in floor position)




## APP.2 INSTALLATION INSTRUCTION (VERTICAL SHIFT)

To install the C3X Lumis HOST system correctly place the projector so that the projected image completely fills the screen. Ideally, to avoid image distortion, the projector should be positioned perfectly perpendicular to the projection screen, as shown in the figure below. The centre of the projection lens should be lined up with the centre of the projection screen.

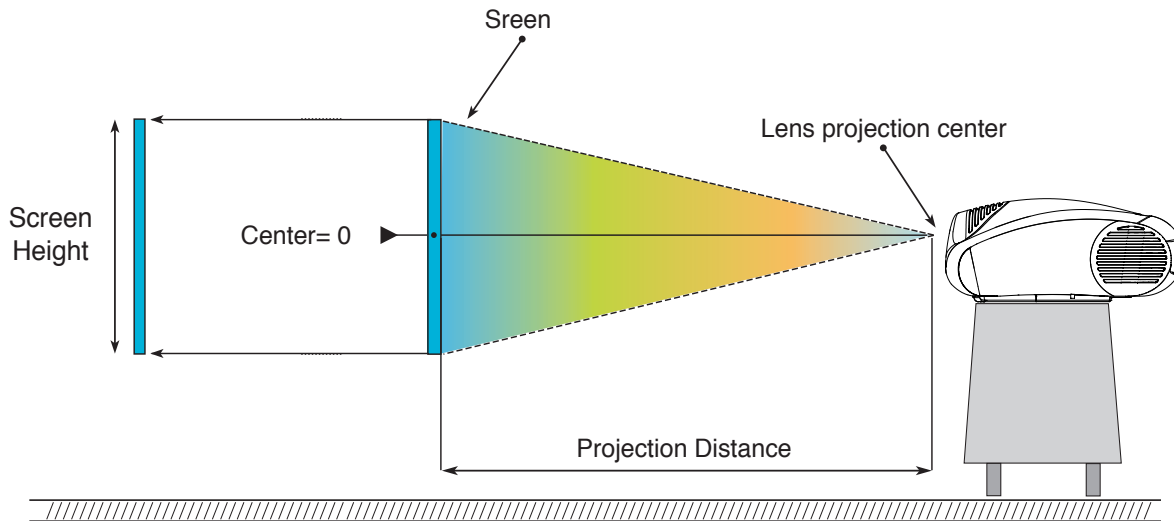

### VERTICAL SHIFT (ASSUMING 0% OFFSET)

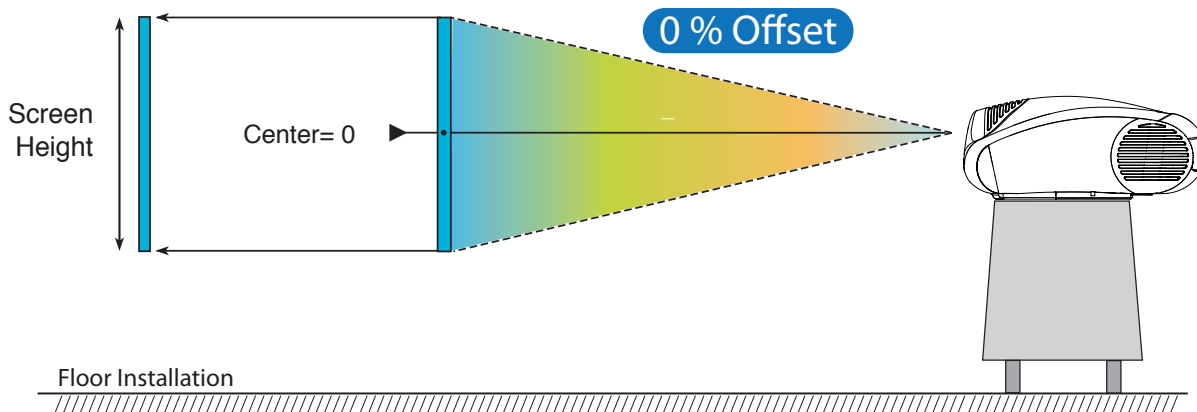


#### CAUTION:


The examples shown in the figure give only general indication on the use of the vertical shift. Each projection lens may require differing vertical shift settings. For more detailed information, see the technical specifications or contact an authorised SIM2 Multimedia centre.

## VERTICAL SHIFT (ASSUMING +50% OFFSET)

If it is not possible to position the projector perpendicular to the projection screen (with the centre of the lens in line with the centre of the screen) you can use the mechanical shift to move the projected image either above or below the centre of the projection lens.

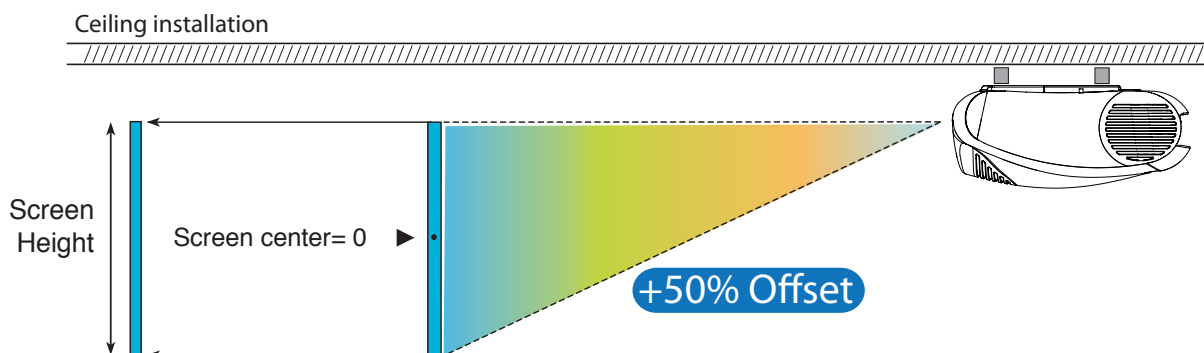


## VERTICAL SHIFT (ASSUMING +50% OFFSET)

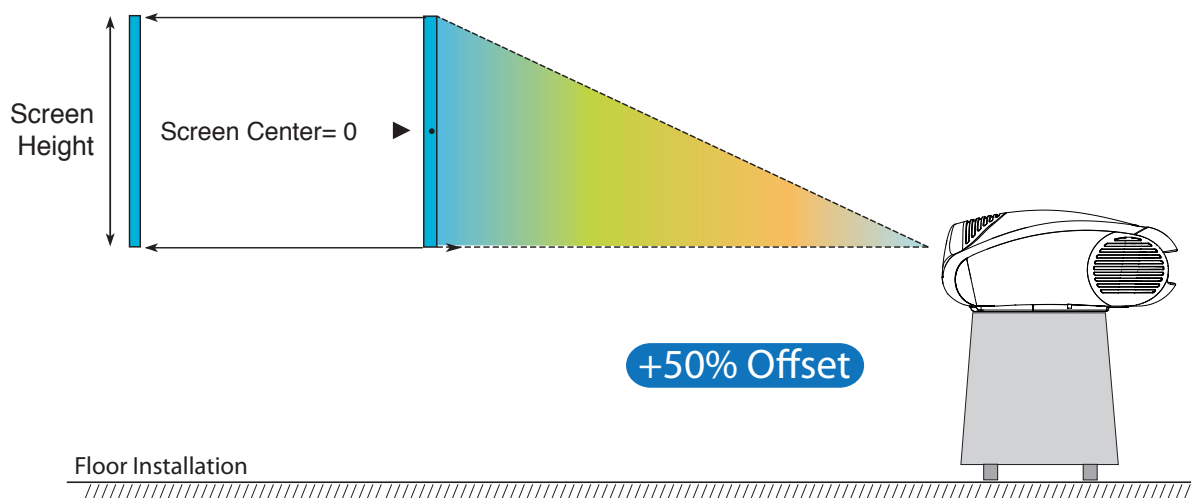


### CAUTION:

The examples shown in the figure give only general indication on the use of the vertical shift. Each projection lens may require differing vertical shift settings. For more detailed information, see the technical specifications or contact an authorised SIM2 Multimedia centre.

## APP.3 HOST DIMENSIONS (unit of measure: mm + inches)

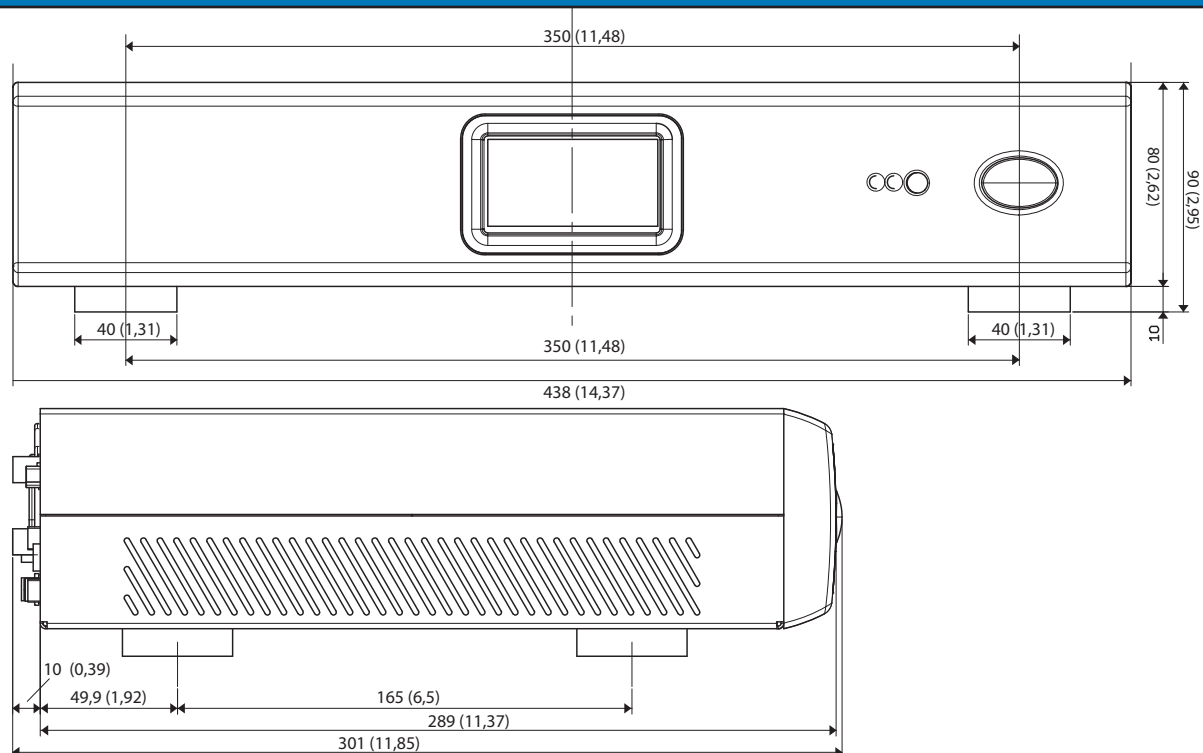

## APP.3 PROJECTOR DIMENSIONS (unit of measure: mm + inches)

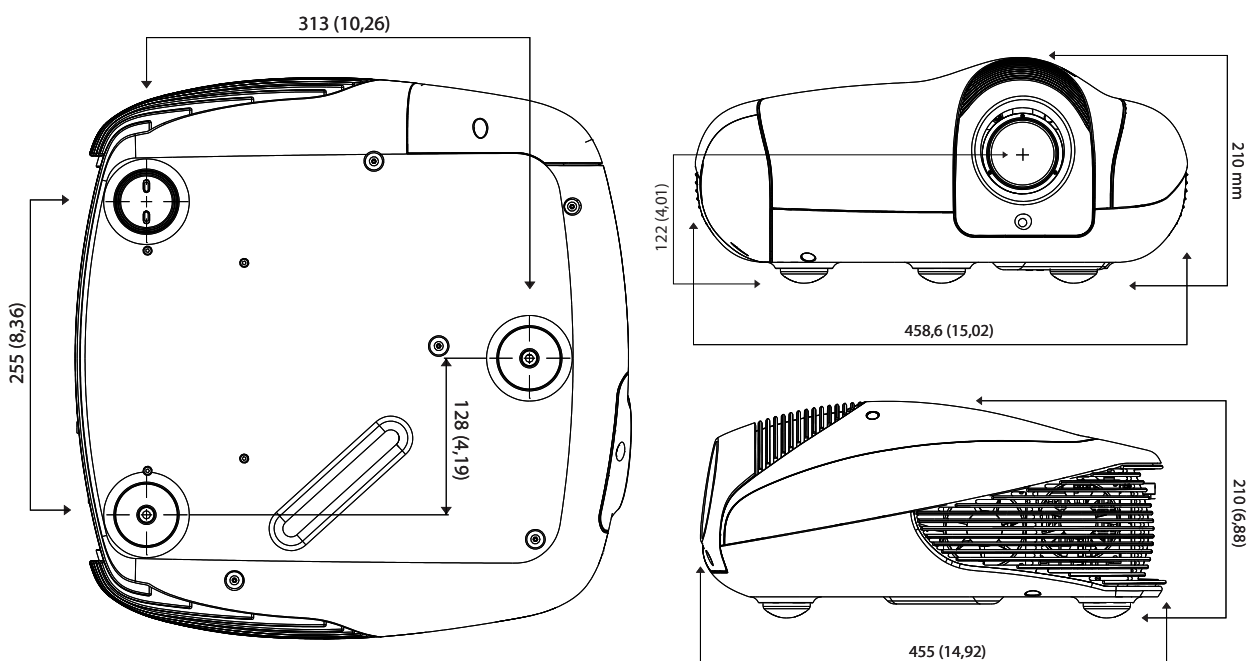



SIM2 Multimedia S.p.a. Viale Lino Zanussi, 11 33170 Pordenone - ITALY  
Phone +39,434,383,253-256 Fax +39.434.383260-261  
www.sim2.com e-mail: info@sim2.it

SIM2 USA Inc. 10108 USA Today Way 33025 Miramar FL - USA  
Phone +1.954.4422999 Fax +1.954.4422998  
www.sim2usa.com e-mail: sales@sim2usa.com

SIM2 Deutschland GmbH Arndtstrasse 34-36 - D-60325 Frankfurt Am Main  
Phone 0800.800.7462 (Germany only)  
Int. Phone: +49-163-500 7462  
Fax 0800.900.7462  
www.sim2.de - e-mail: info@sim2.de

SIM2 UK Steinway House Worth Farm, Little Horsted Nr. Uckfield, East Sussex TN22 5TT  
Phone +44.0182 5.750850 - Fax +44.0182 5.750851  
www.sim2.co.uk - e-mail: info@sim2 .co.uk  
Producer Registration Number: WEE/JJ0125YT

SIM2 Multimedia - Shanghai - Representative office  
Room 905, Jing'an Tower  
1701 Beijing Road West  
200040 China  
Tel: +86-21-62881991  
email: vsheng@sim2.com

